

 
 


 
 
 
Russell Hobbs®

 
 
A BRITISH ICON SINCE 1952

28760

 www.russellhobbs.com

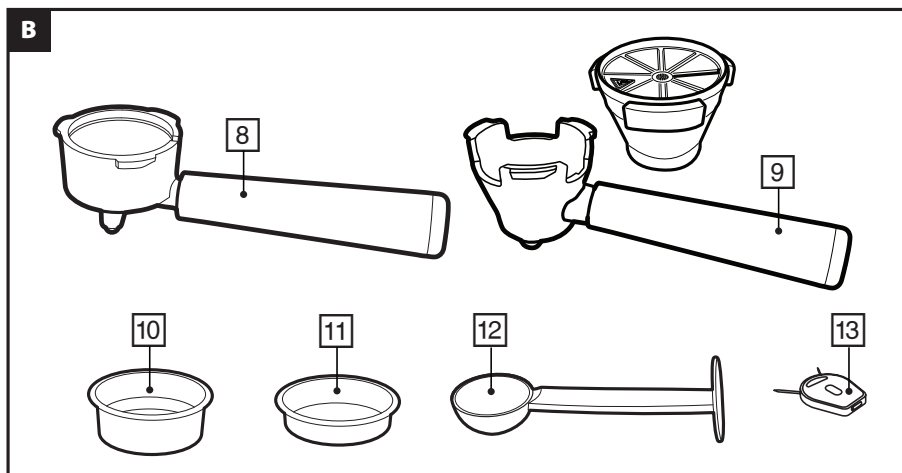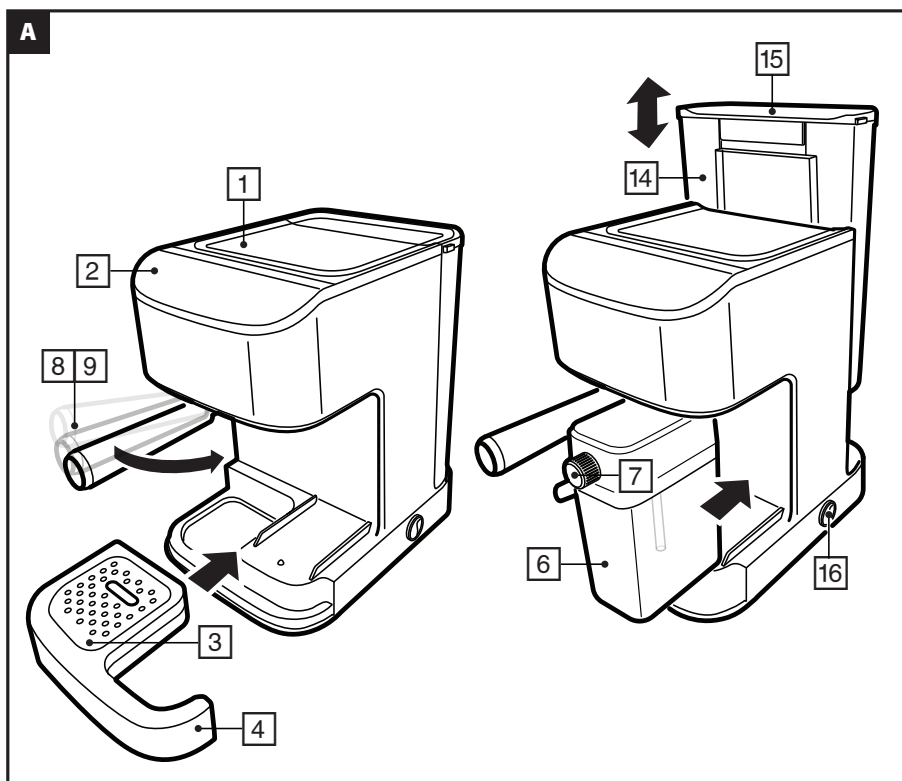

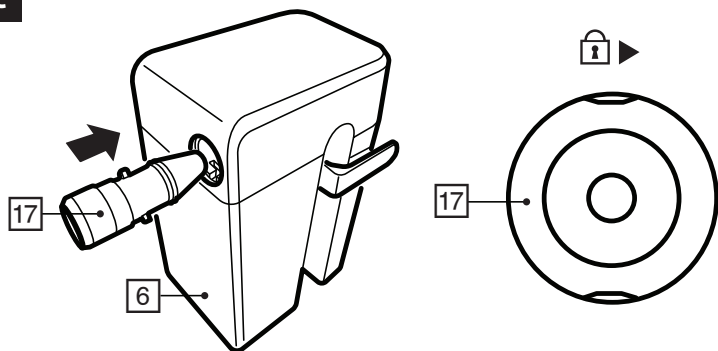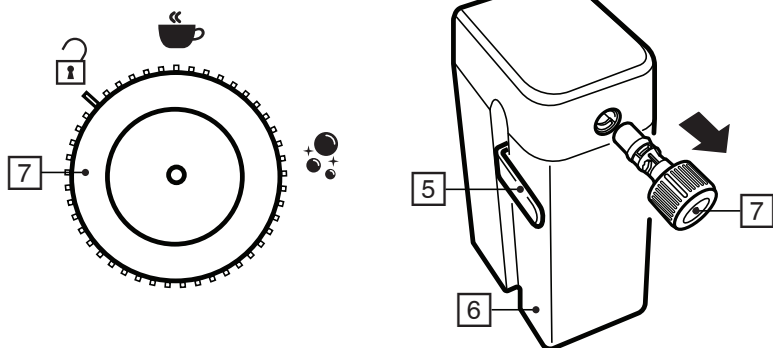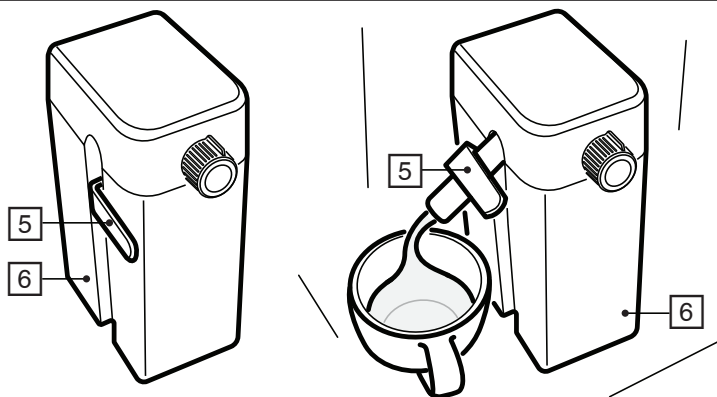C**D****E**

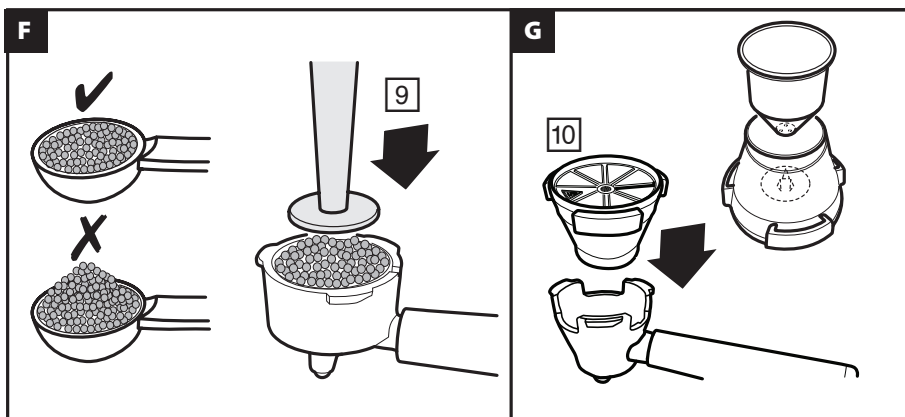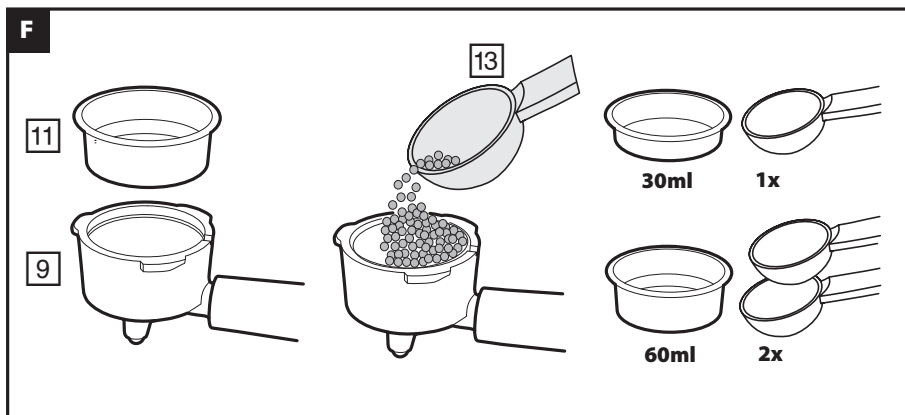

Before First Use

	Read the instructions and retain for future reference.
---	--

Intended Use

	Household use only
	Do not use outdoors

Specification

Power Rating (W)	1350
Operating voltage (V)	220-240, 50/60Hz

Important Safeguards

When using an electrical unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the unit for any purpose other than those described in these instructions.
- Do not operate the unit if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- Do not leave the unit unattended while plugged in.
- This unit can be used by children

aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/ instructed and understand the hazards involved.

- Children shall not play with the unit.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Keep the unit and cable out of reach of children under 8 years.
- Misuse of the unit may cause injury.
- The coffee-maker shall not be placed in a cabinet during use.
- If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.
- The surface of the heating element is subject to residual heat after use.
- Use the unit according to these instructions. Any misuse may cause potential injury, electric shock or other hazards.
- This unit can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.
- Clean the product and all other accessories after each use.

- Sit the unit on a stable, level, heat-resistant surface.
- Do not use the unit for any purpose other than those described in these instructions.
- Do not use the unit if it's damaged or malfunctions.
- CAUTION - To prevent damage to the unit, do not use aggressive cleaning agents when cleaning. Use a soft cloth and a mild detergent.

Warning Symbol Glossary

	Do not use this unit near bathtubs, showers, basins or other vessels containing water.
	The surfaces of the unit will get hot. Residual heat will keep the surfaces hot after use.
	Use Caution. Sharp objects
	Do not immerse in any liquid

Parts List

1	Cup warming plate	
2	Function Buttons	
3	Drip tray cover	
4	Removable drip tray	
5	Milk Nozzle	
6	Milk Tank	
7	Milk Control Dial	
8	Portafilter	
9	Portafilter for capsules	
10	2 shot sieve	
11	1 shot sieve	
12	Measure/tamper	
13	Cleaning tool	
14	Water tank	
15	Water tank lid	
16	On/Off Switch	
17	Milk Tank valve	
Function Buttons		
	Single Espresso	
	Double Espresso	

	Latte	
	Cappuccino	
	Cortado	
	Macchiato	
	Flat White	
	Clean	

Before First Use

Wash:

3	Drip tray cover
6	Milk Tank
7	Milk Control Dial
9	Portafilter
10	2 shot sieve
11	1 shot sieve
12	Measure Tamper
14	Water Tank

in warm soapy water. Rinse and dry.

- Clean the unit by filling and running the unit without coffee.

Milk Control Dial Glossary

Dial Position	Function
	Remove Milk Control Dial
	Milk Frothing
	Clean Mode

Audio feedback

This unit plays audio to indicate button presses.

Holding:

Latte
Cortado

together will toggle audio feedback on/off.

Filling Water Tank

Important Never operate the unit without water and below minimum level marker.

Remove:

14	Water tank
15	Water tank lid

- Lift the:

- Fill the with cold, fresh water observing the max marking.
- Refit (Fig. A). Ensure it is correctly fitted and fully seated.

Priming

- Assemble an empty portafilter onto the unit.
- Install the Milk Tank. Make sure that the Milk Tank is assembled and Water Tank is filled.
- Run the Latte function 3x minimum, or until water runs from the portafilter.

Auto Shut-off Mode

After 25 minutes of inactivity, the unit will enter standby mode. Press any button or toggle the on/off switch to turn it back on.

Default/Pre-Heat Mode

The unit goes to Default Mode when switched on, or when you press any button in Standby Mode.

When the unit enters Default Mode and the unit is not at brewing temperature, all indicators will flash only if the Milk Tank is installed. Only the espresso functions will flash if Milk Tank is not installed.

When the unit reaches the correct brewing temperature, all indicators will remain illuminated.

Auto Espresso Mode

Button	Action
Single Espresso or Double Espresso	Press

Auto Brew Mode

The unit will automatically froth the milk and then adds the espresso for the following:

Latte
Cappucino
Cortado
Macchiato
Flat White

Fill:

6	Milk Tank
---	-----------

with milk up to the max line, replace the lid, and insert the tank into the unit.

Note An audible click confirms the Milk Tank is installed correctly.

To remove the milk tank:

- Lift the front of the tank up.
- Pull the tank away from the unit.

The drink functions will light up once the tank is fully in place. Milk functions will flash if pre-heating is required.

Place cup onto the drip tray, ensuring both:

8	Portafilter
5	Milk Nozzle

are directed to the cup to avoid spills.

Select and press beverage from:

2	Function Buttons
---	------------------

When using Auto Brew Mode, we recommend to use **Short Clean Cycle** after each use. There is no requirement to remove milk from the milk tank.

Manual Brew

Press and hold:

Button	Action	Seconds
Single Espresso or Double Espresso	Press + Hold	3

When desired amount is reached, release the button.

To manually steam/froth milk:

Button	Action
Latte	Press + hold to activate
	Release to de-activate

Pre-set Volume Settings

Press and hold together:

Button	Seconds
Single Espresso or Double Espresso	5

A tone will sound. The one-shot icon and the two-shot icon will flash. To adjust the volume for the single espresso preset or the double espresso preset, do the steps that follow:

- Press and hold the applicable function button.
- Keep the button pressed until the machine gives the quantity that you want.
- The machine will make coffee while you press the button.

Release the button to save the updated preset volume. All indicators will flash 3 times to confirm the updated setting.

To return to the factory default settings.

Button	Action	Seconds
Clean	Press + Hold	5

Note Preset volumes will apply to all drinks.

Exit Pre-set Mode

Button	Action	Seconds
Single Espresso + Double Espresso	Press + Hold	5

or,

Button	Action
On/Off Switch	Press

Brew Temperature Error

If you try to start a brew function before the unit gets to the correct brew temperature:

- All lights flash three times.
- The unit goes back to the preheat mode.

Milk Tank Error

If you try to start a milk-based function and the milk tank is not installed correctly, these indicators will flash 3x.

Latte
Cappuccino
Cortado
Macchiato
Flat White

Note An audible click confirms the Milk Tank is installed correctly.

To remove the milk tank:

- Lift the front of the tank up.
- Pull the tank away from the unit.

Empty Water Tank Error

If the unit detects no flow during brewing, the unit cancels the brew function.

- All lights flash three times.
- The unit goes back to the standby mode.

The unit must be primed again if there is an attempted operation without water in the tank.

Short Clean Cycle

Important This function should be used after each use of milk based drinks.

You do not need to remove the milk from the milk tank during the cleaning cycle.

Rotate:

Button	Position
Milk Control Dial	

Place a cup under the milk nozzle before you start the operation.

To start clean cycle, Press:

Button
Clean

The unit will dispense steam/hot water for 20 seconds through Milk Nozzle.

Clean Warning

After 200 uses, the unit shows a clean warning.

The clean icon will:

- Flash three times.
- Remain on.

A Full Clean Cycle must be initiated.

Cancel Clean Warning

To cancel the clean warning press:

Button	Seconds
Single Espresso + Flat White	3

Full Clean Cycle

Descaler must be placed in the water tank and a large vessel should be placed under the portafilter and milk nozzle. Allow the tank to fully run through water.

Dial	Action	Position
Milk Control Dial	Rotate	

Button	Action	Seconds
Clean	Press + Hold	5

To cancel:

Button
Clean

Fill tank with plain water and repeat clean cycle.

When the cycle is complete, the unit goes back to default mode.

- It preheats if necessary.
- It removes the clean warning.

Cleaning & Maintenance

- Unplug the unit and allow to cool.
- Disassemble the Milk Tank, referencing all parts to be disassembled on the lid of the tank.
- Remove the portafilter and sieve and empty out the coffee grounds. Wash under running water and dry thoroughly.
- Use the cleaning tool to unblock the openings in the portafilter.
- The sieves, drip tray and drip tray cover can be cleaned in a dishwasher.

Recycling



To avoid environmental and health problems due to hazardous substances, units and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website en.russellhobbs.com/erp

Service

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It is on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester
M35 0HS.

Email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note, If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

Guarantee

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without

limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase. Register at:

uk.russellhobbs.com/product-registration

Consumables are guaranteed only for their recommended lifecycle.

Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

Troubleshooting

Issue	Cause	Fix
No espresso is made	Empty or low Tank	Fill observing max line
	Portafilter or sieve is blocked.	Remove and clean.
	Grind is too fine or coarse.	Grind the coffee to the correct consistency.
	Too much tamping pressure was used.	Empty sieve and re-add coffee using less tamping pressure.
	Unit needs to be primed	Prime unit
Porta-filter Leaking	Not correctly seated	Refit ensure it is locked in position

Portafilter fitment	Too much coffee in the sieve.	Use the supplied measuring spoon/ tamper as directed.
	Debris around the portafilter fitting.	Clean the area where the portafilter fits.
No milk dispensed or poor frothing quality	Possible loose connection. Milk Nozzle is clogged. Insufficient milk in reservoir.	Fully clean all parts. Ensure Milk Control Dial is set to  position.

Ref. No. 28760

25/UK/ 28760
T23-9005332-A
Version 02 /26

Russell Hobbs is a Registered Trade
Mark of Spectrum Brands, Inc., or one of
its subsidiaries.

Spectrum Brands (UK) Limited
Fir Street,
Failsworth,
Manchester
M35 0HS
www.russellhobbs.com

© 2026 Spectrum Brands, Inc.
