



SINCE 1888

EPICFLAME Core 3 EPICFLAME Pro 4 EPICFLAME Pro 6



Abb.: EPICFLAME Pro 4

Art-Nr. 251164 / 251165 / 251166

 
support@roesle.de
www.roesle.com

DE	Montageanleitung
EN	Assembly Instructions
FR	Guide d'assemblage
IT	Istruzioni d'uso





EPICFLAME Core 3



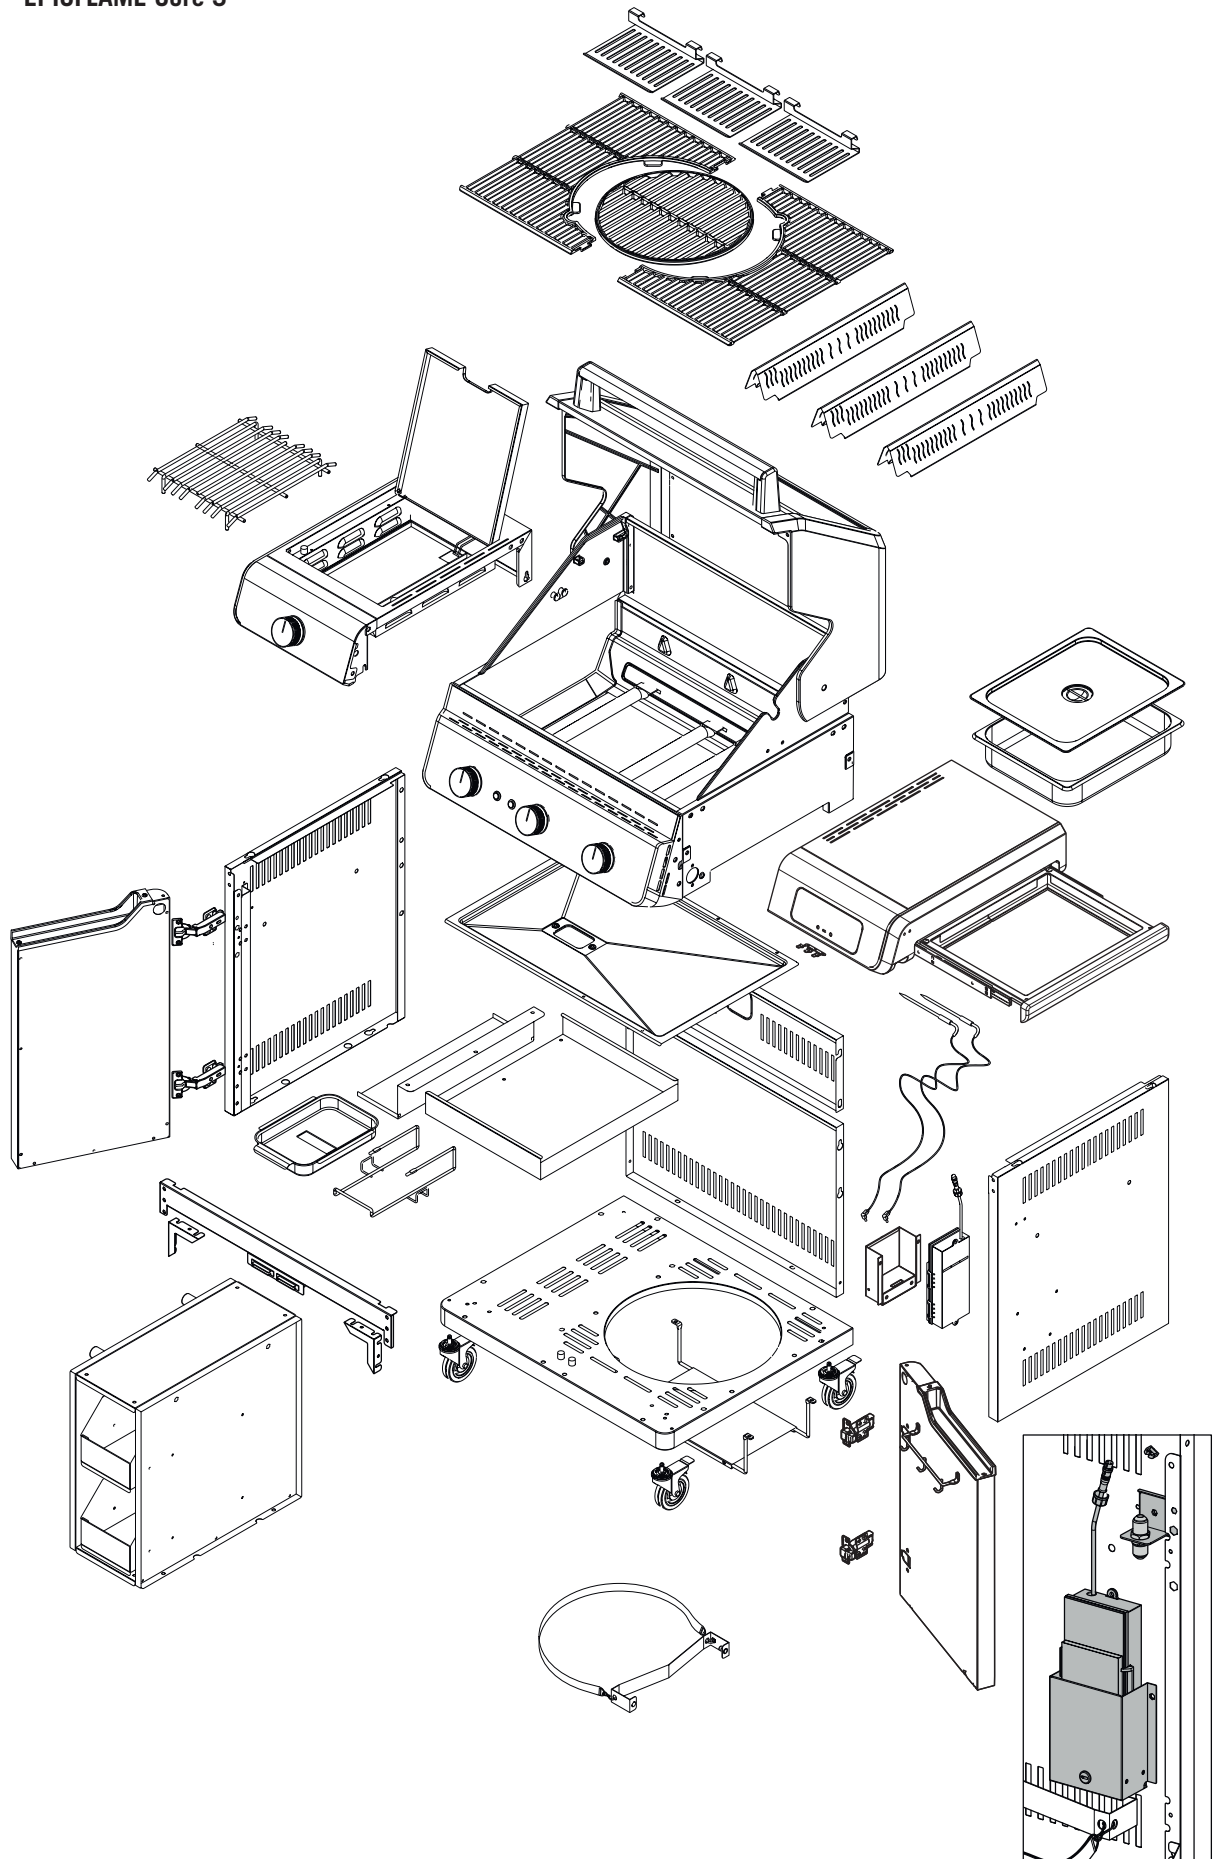


12.2025





   
EPICFLAME Core 3

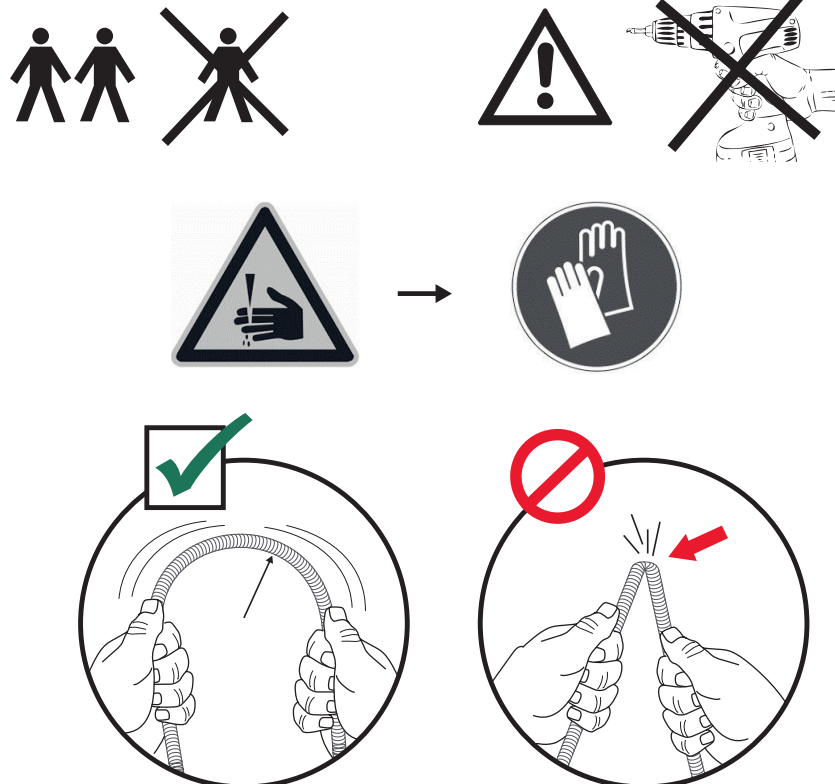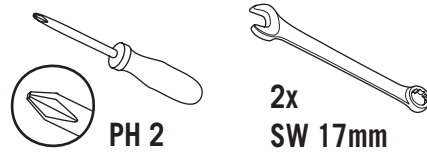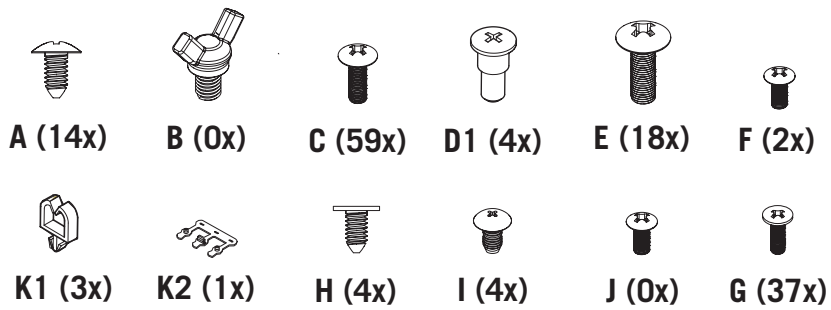

12.2025








 
EPICFLAME Pro 4

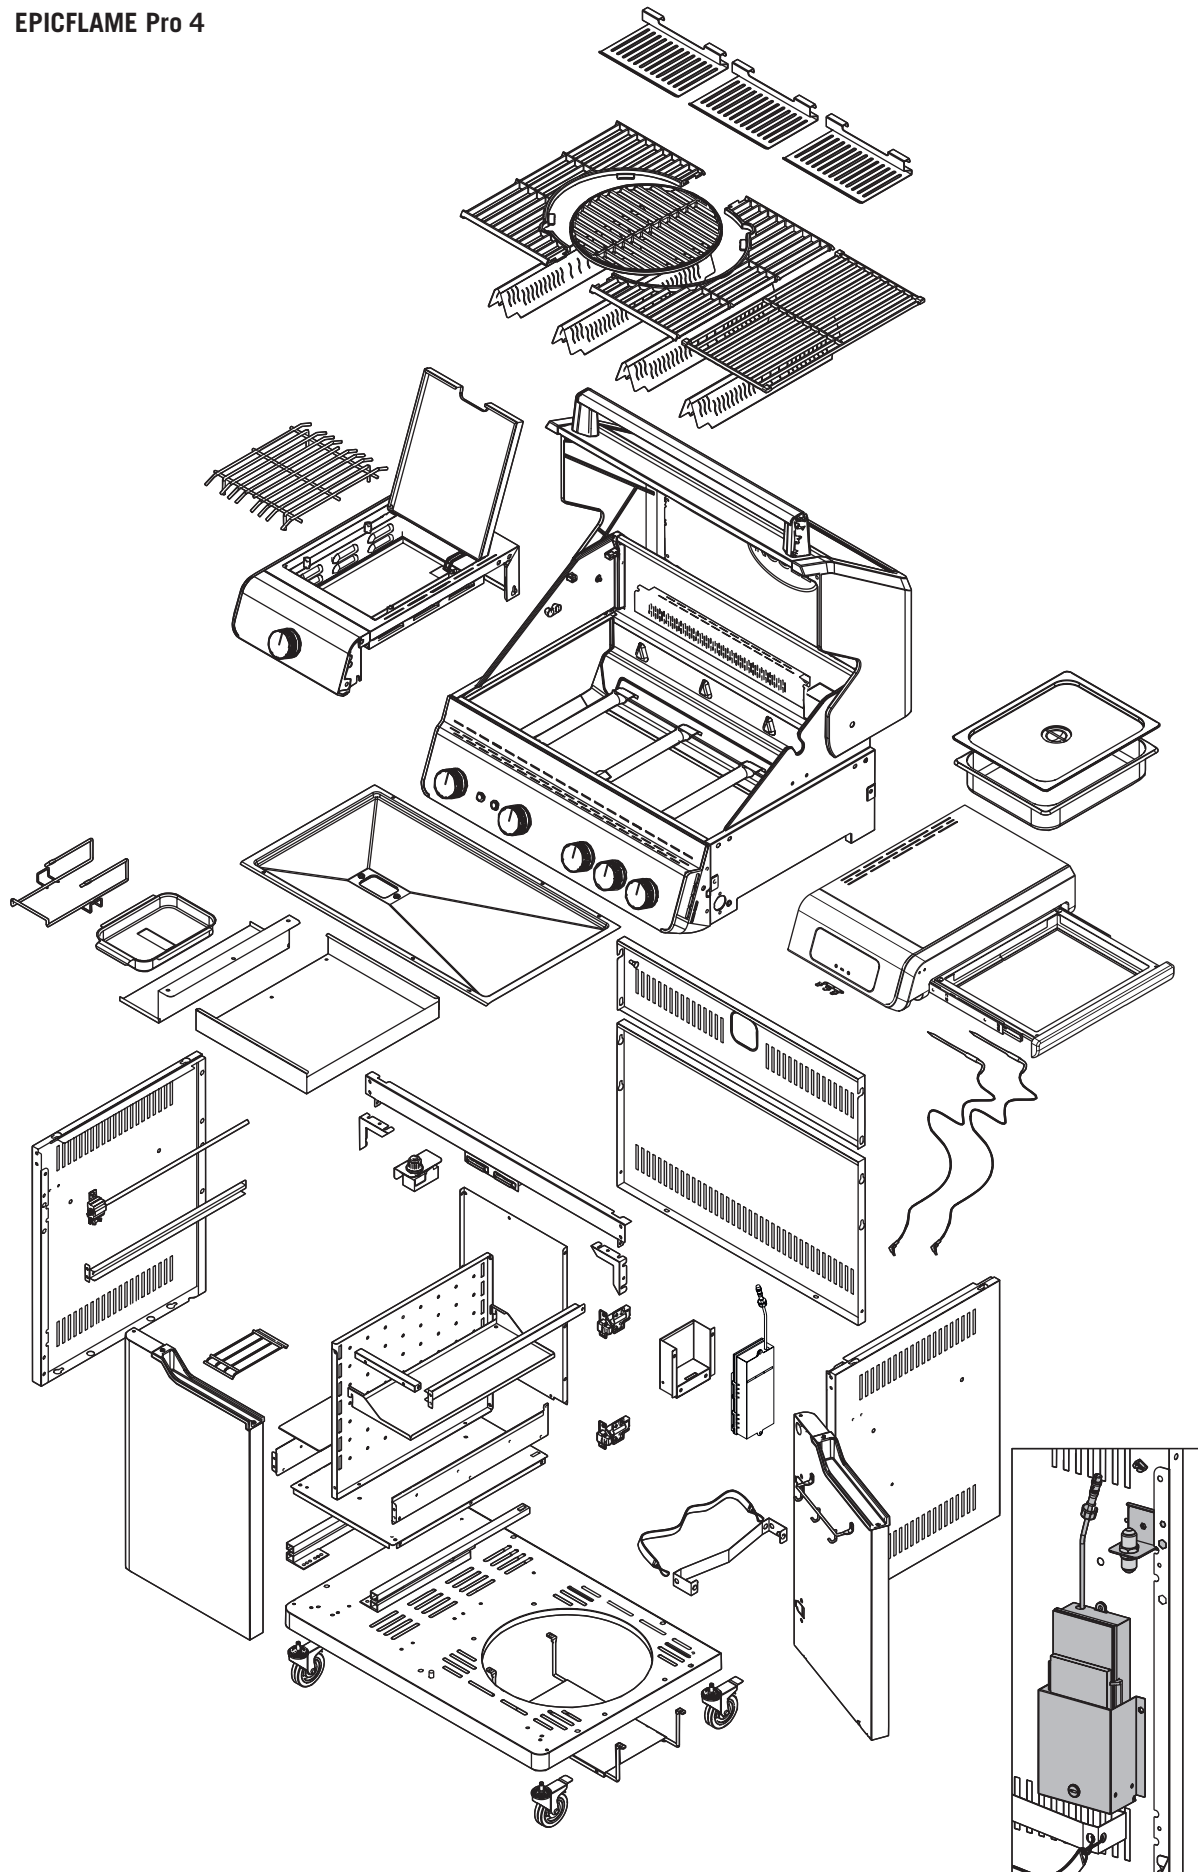

12.2025




      EPICFLAME Pro 4

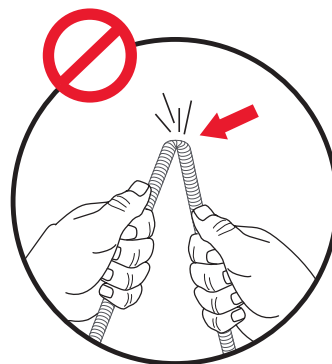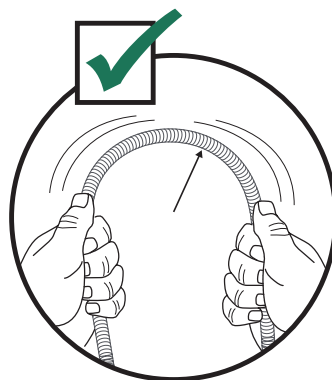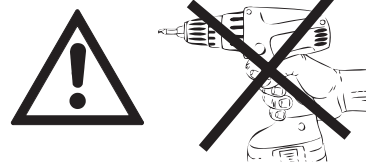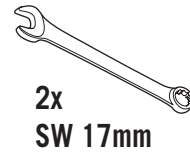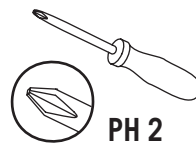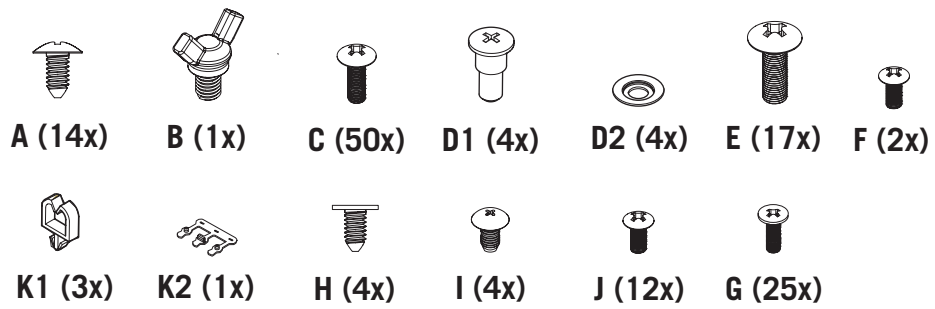



EPICFLAME Pro 6






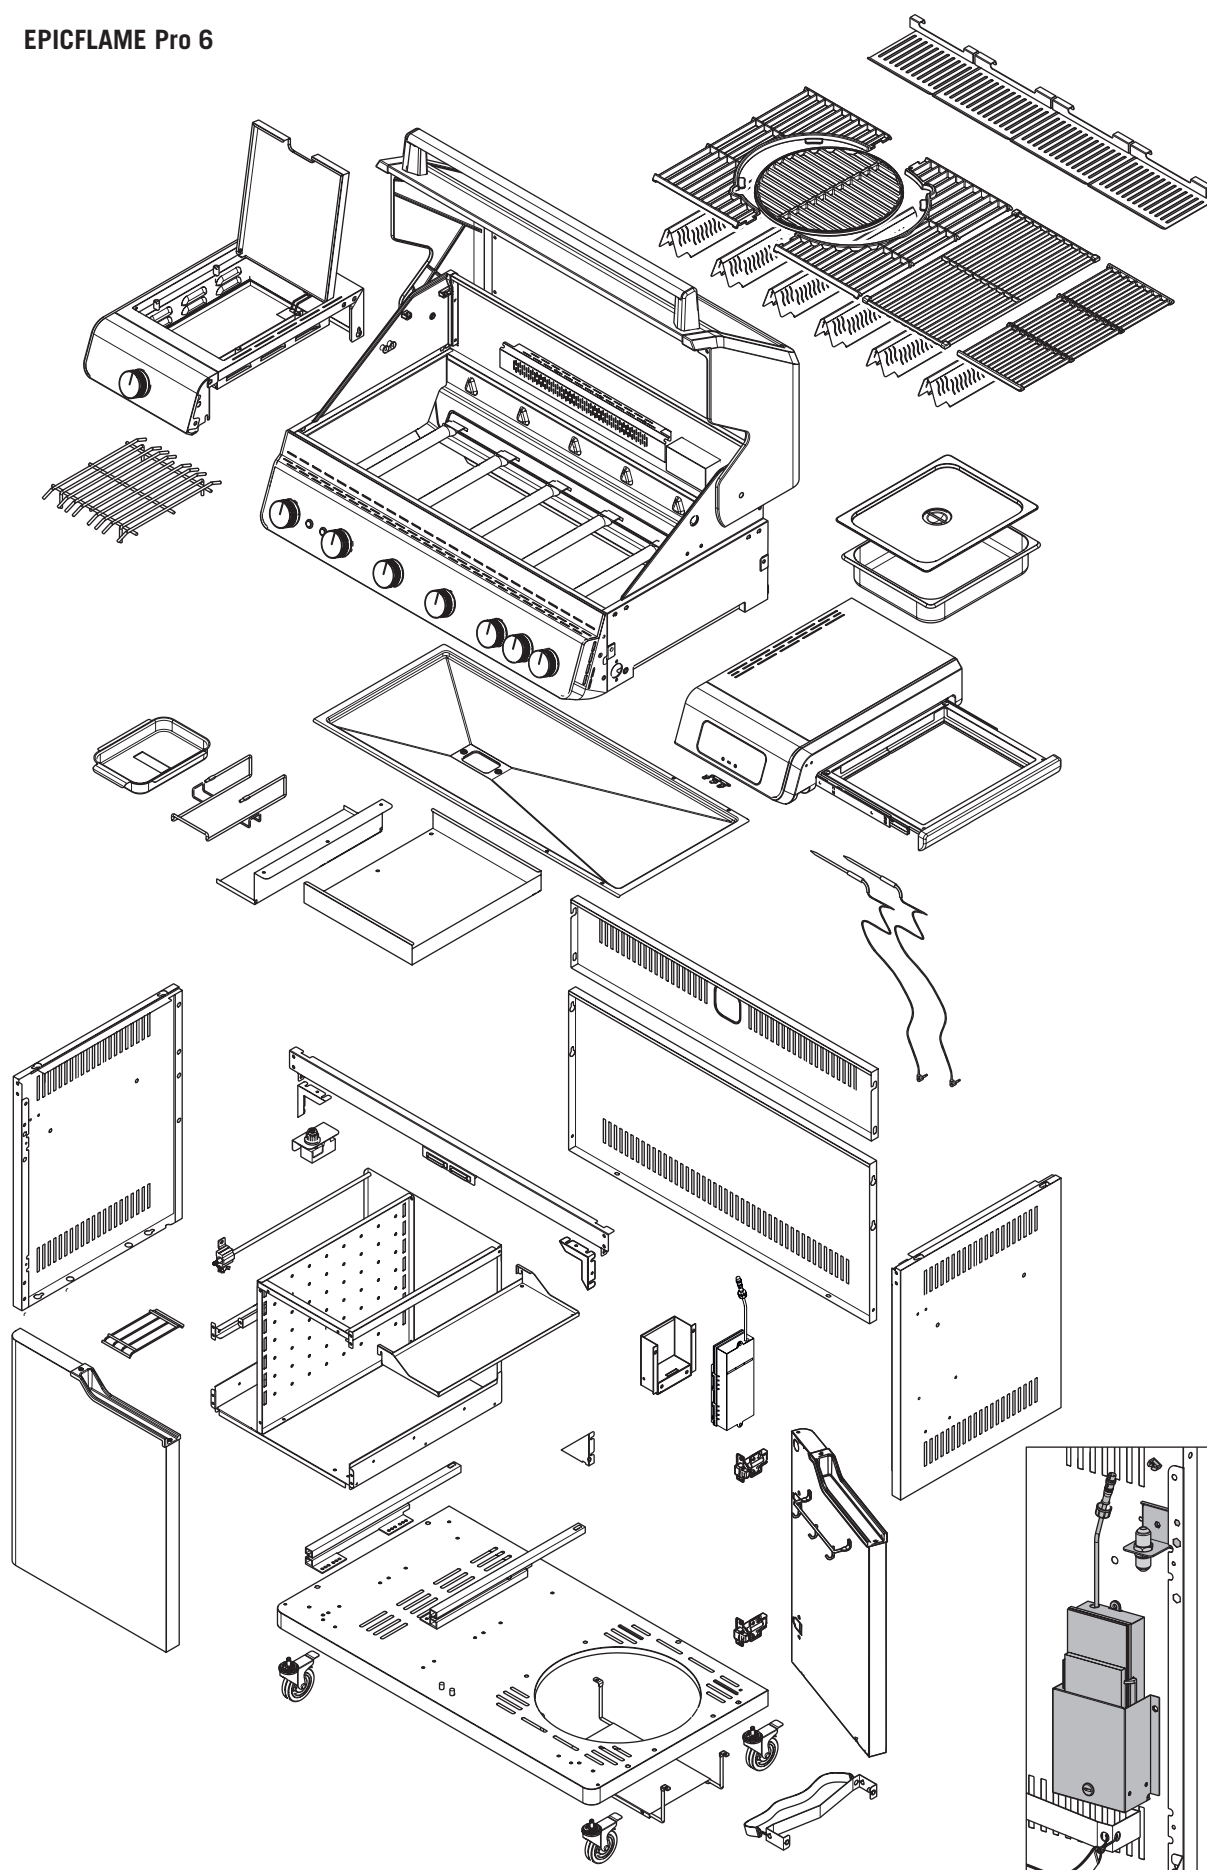 


12.2025







 
 
 
 
 
 
EPICFLAME Pro 6

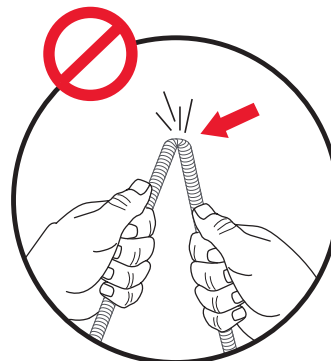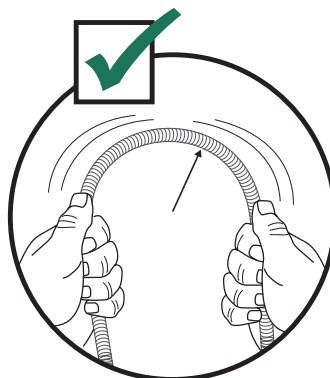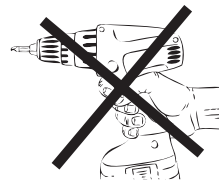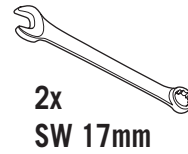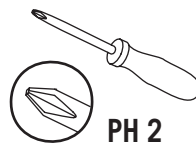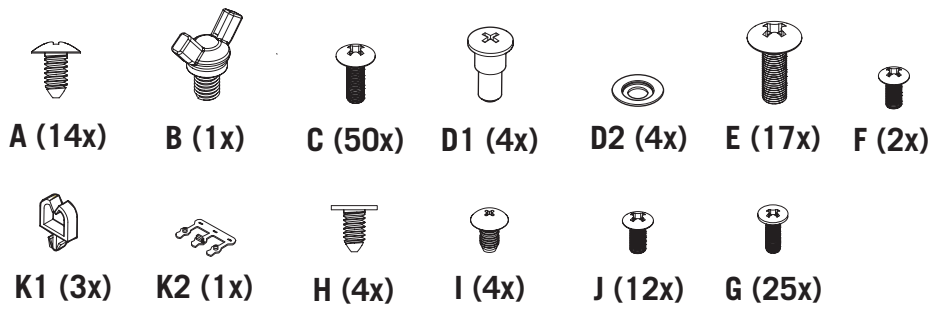



1

        
EPICFLAME Pro 4
EPICFLAME Pro 6

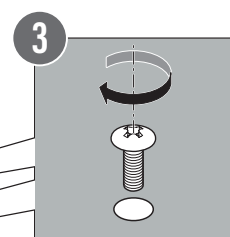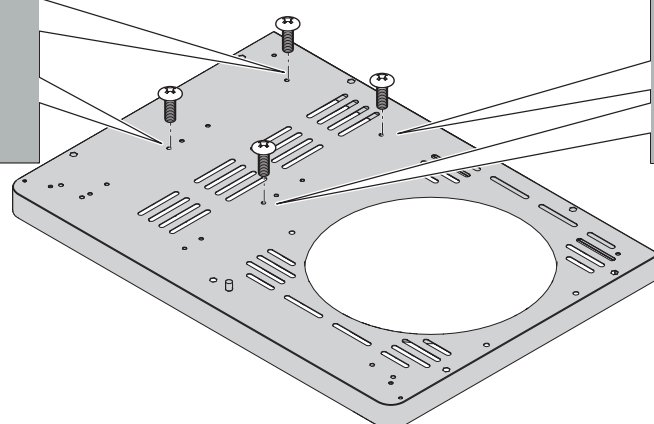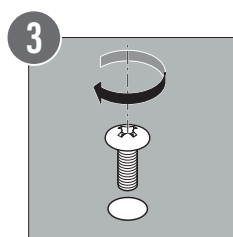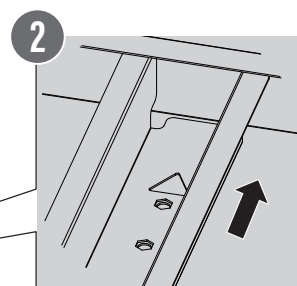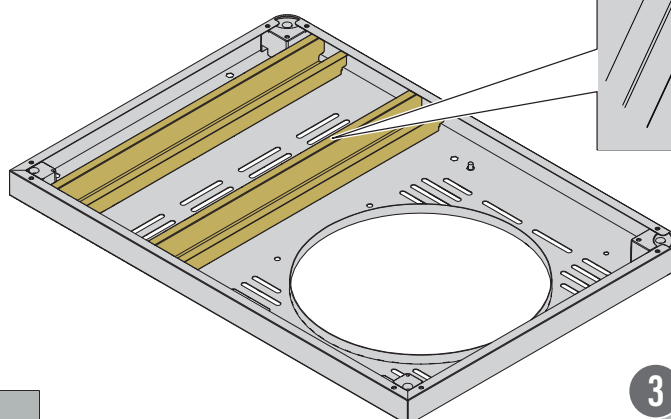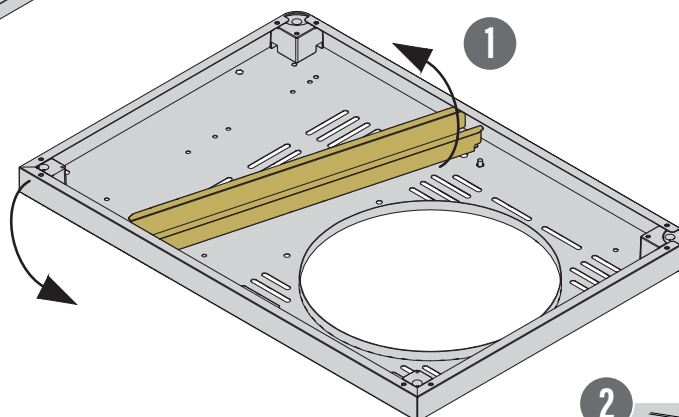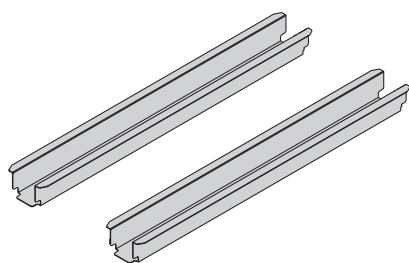




2

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

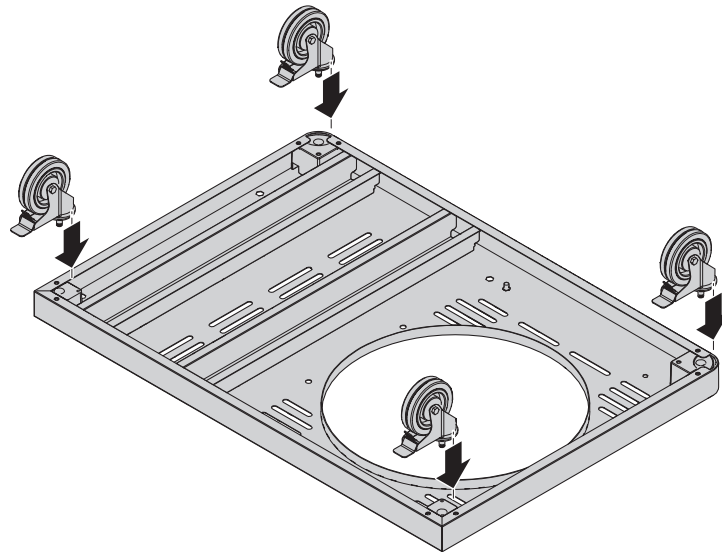

3

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

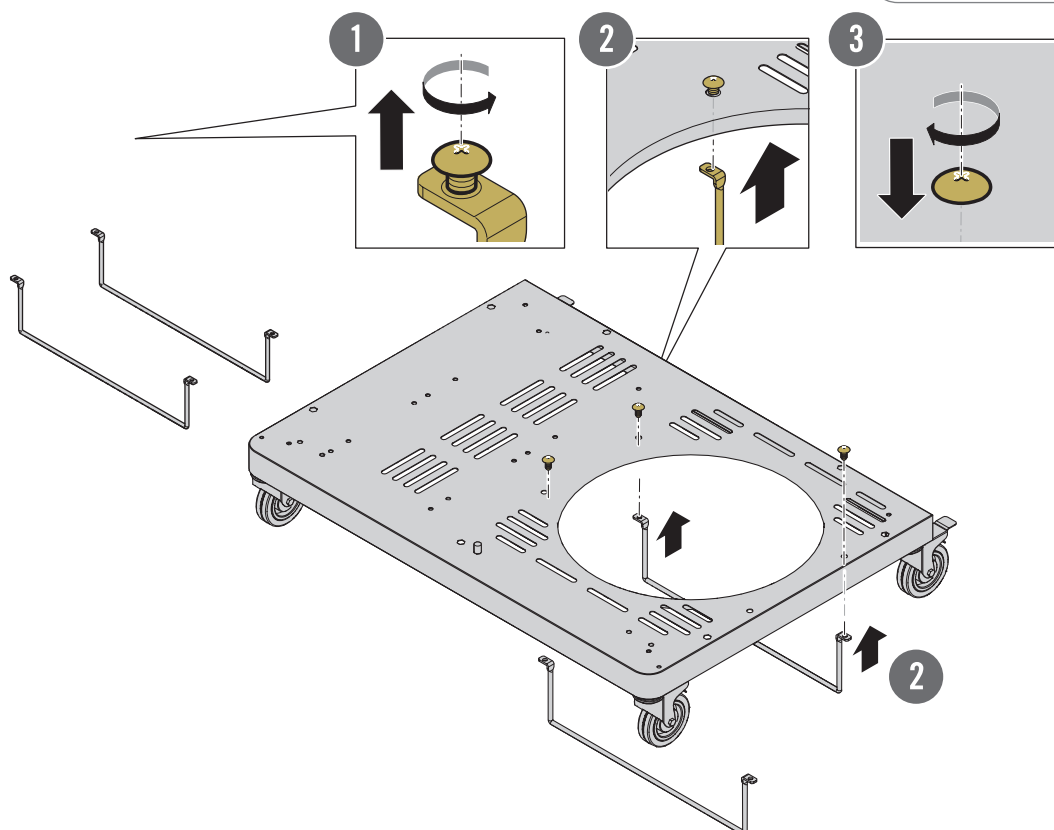


12.2025




4

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

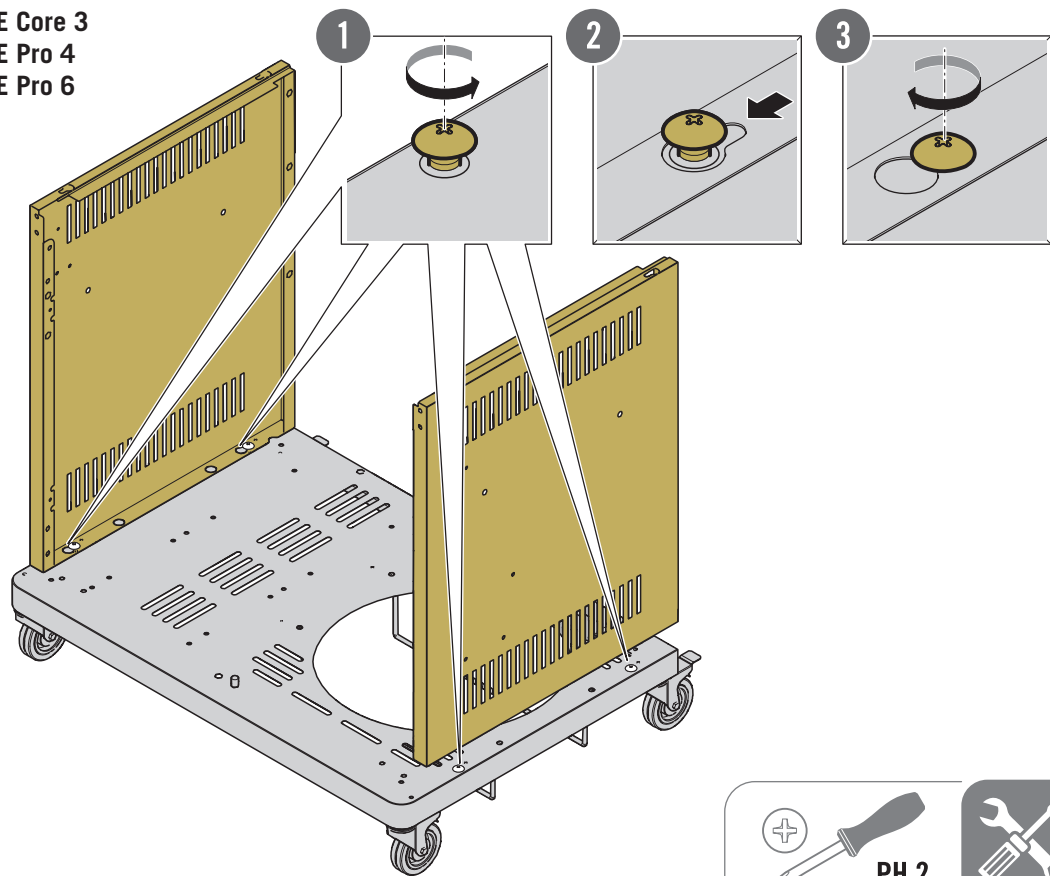

5

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

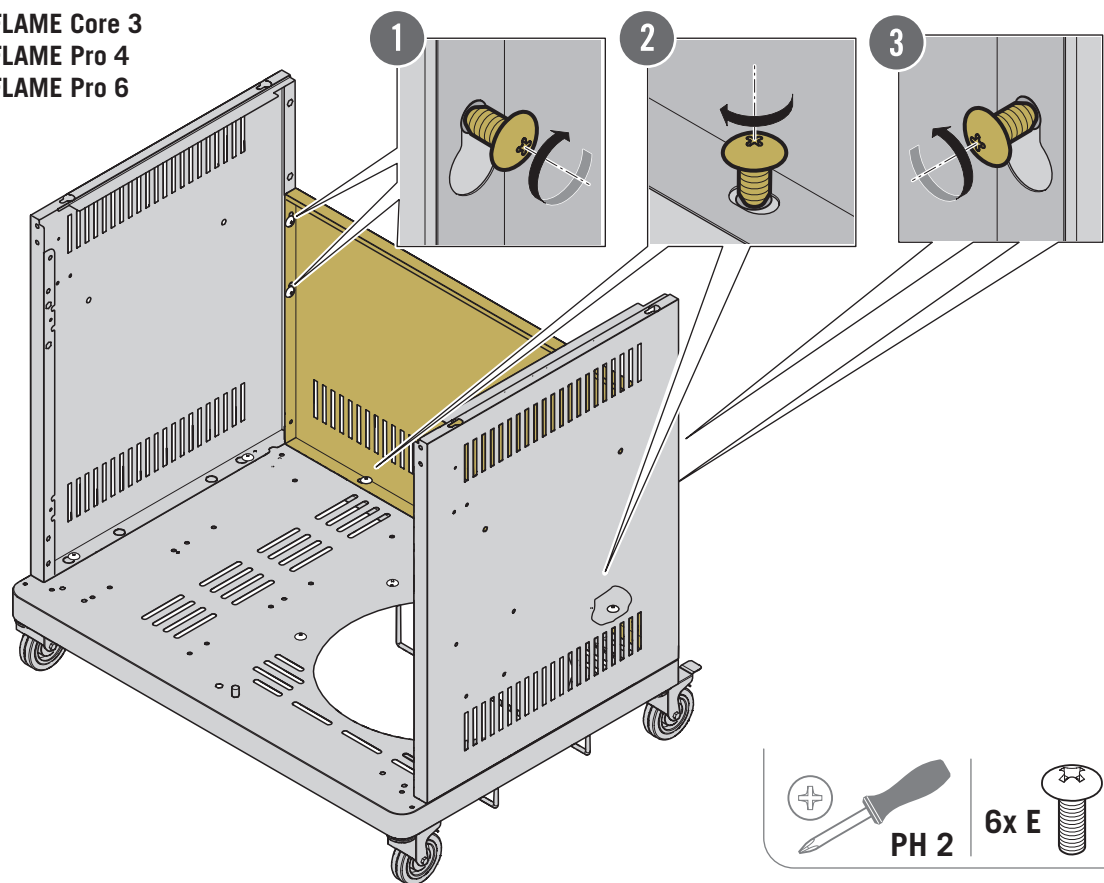



12.2025






6

  EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

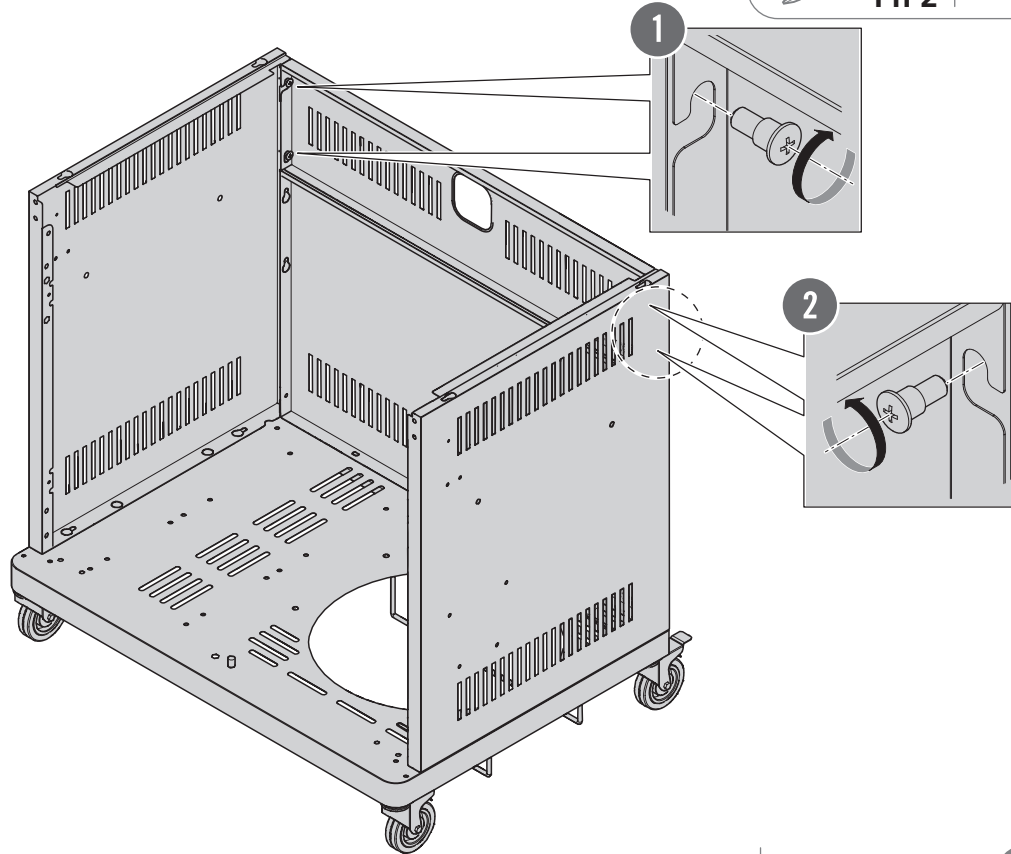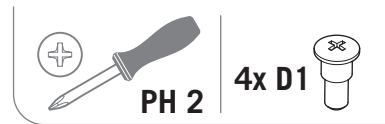

7

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6


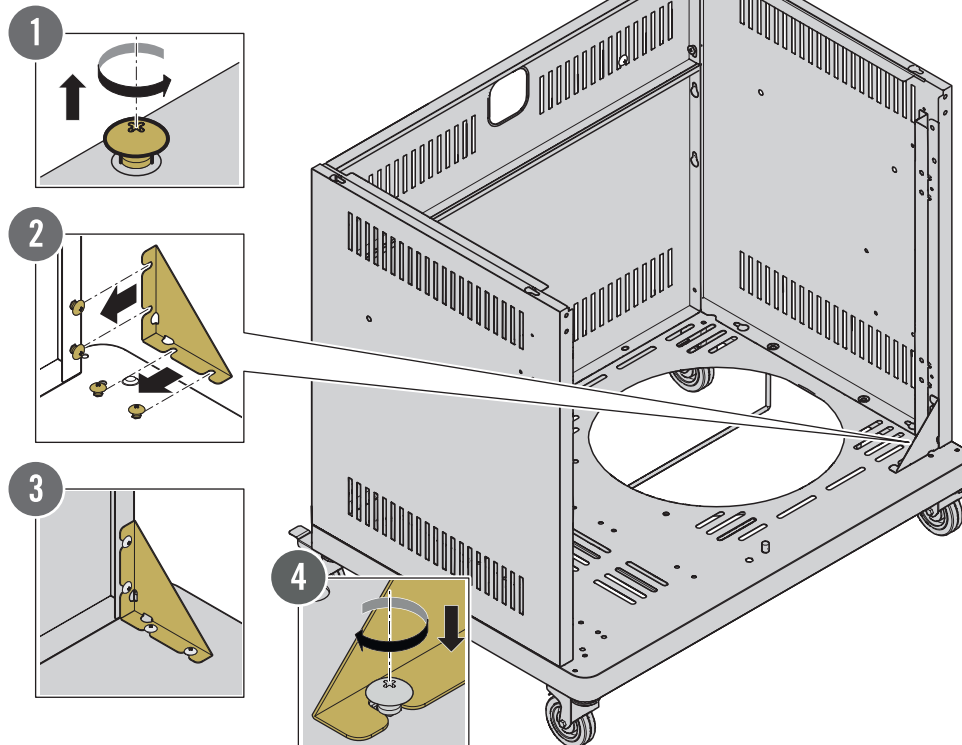


12.2025




8

  EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

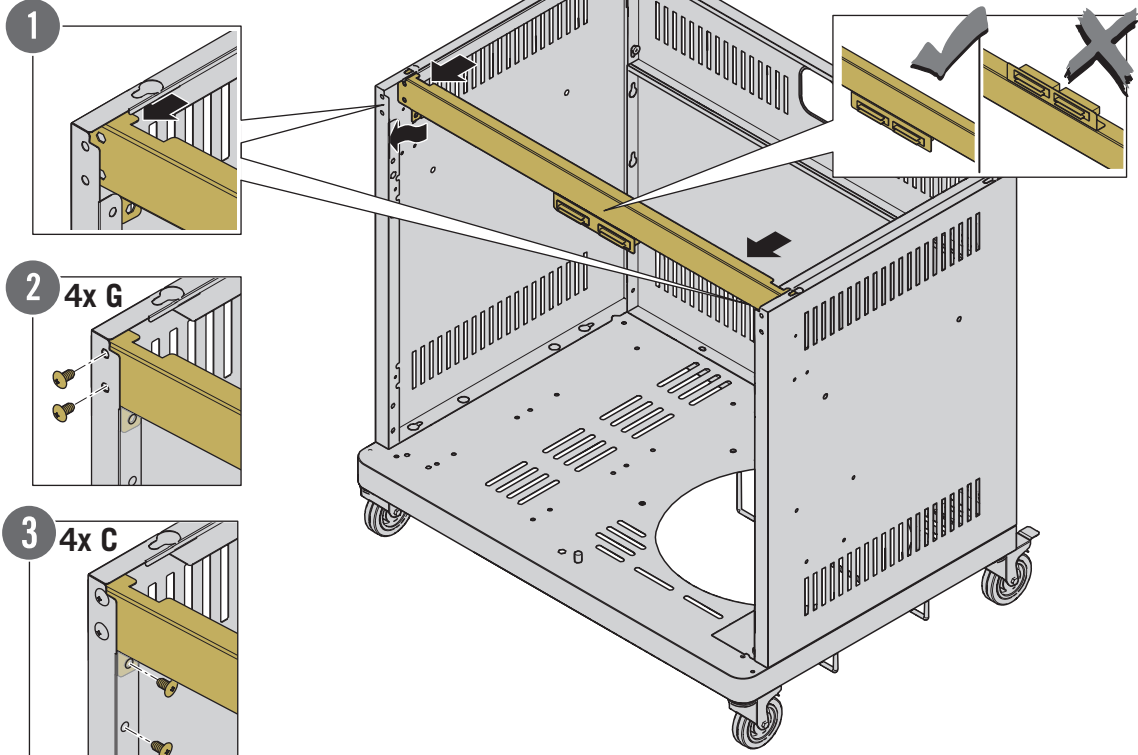

9

 
EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

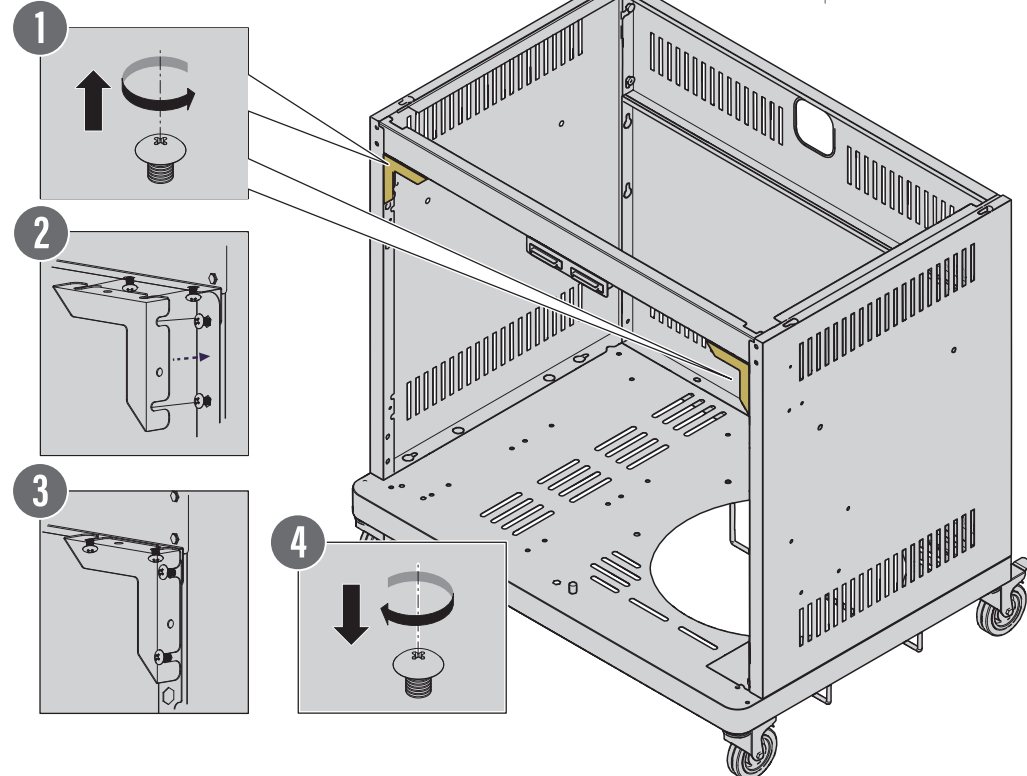



10

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

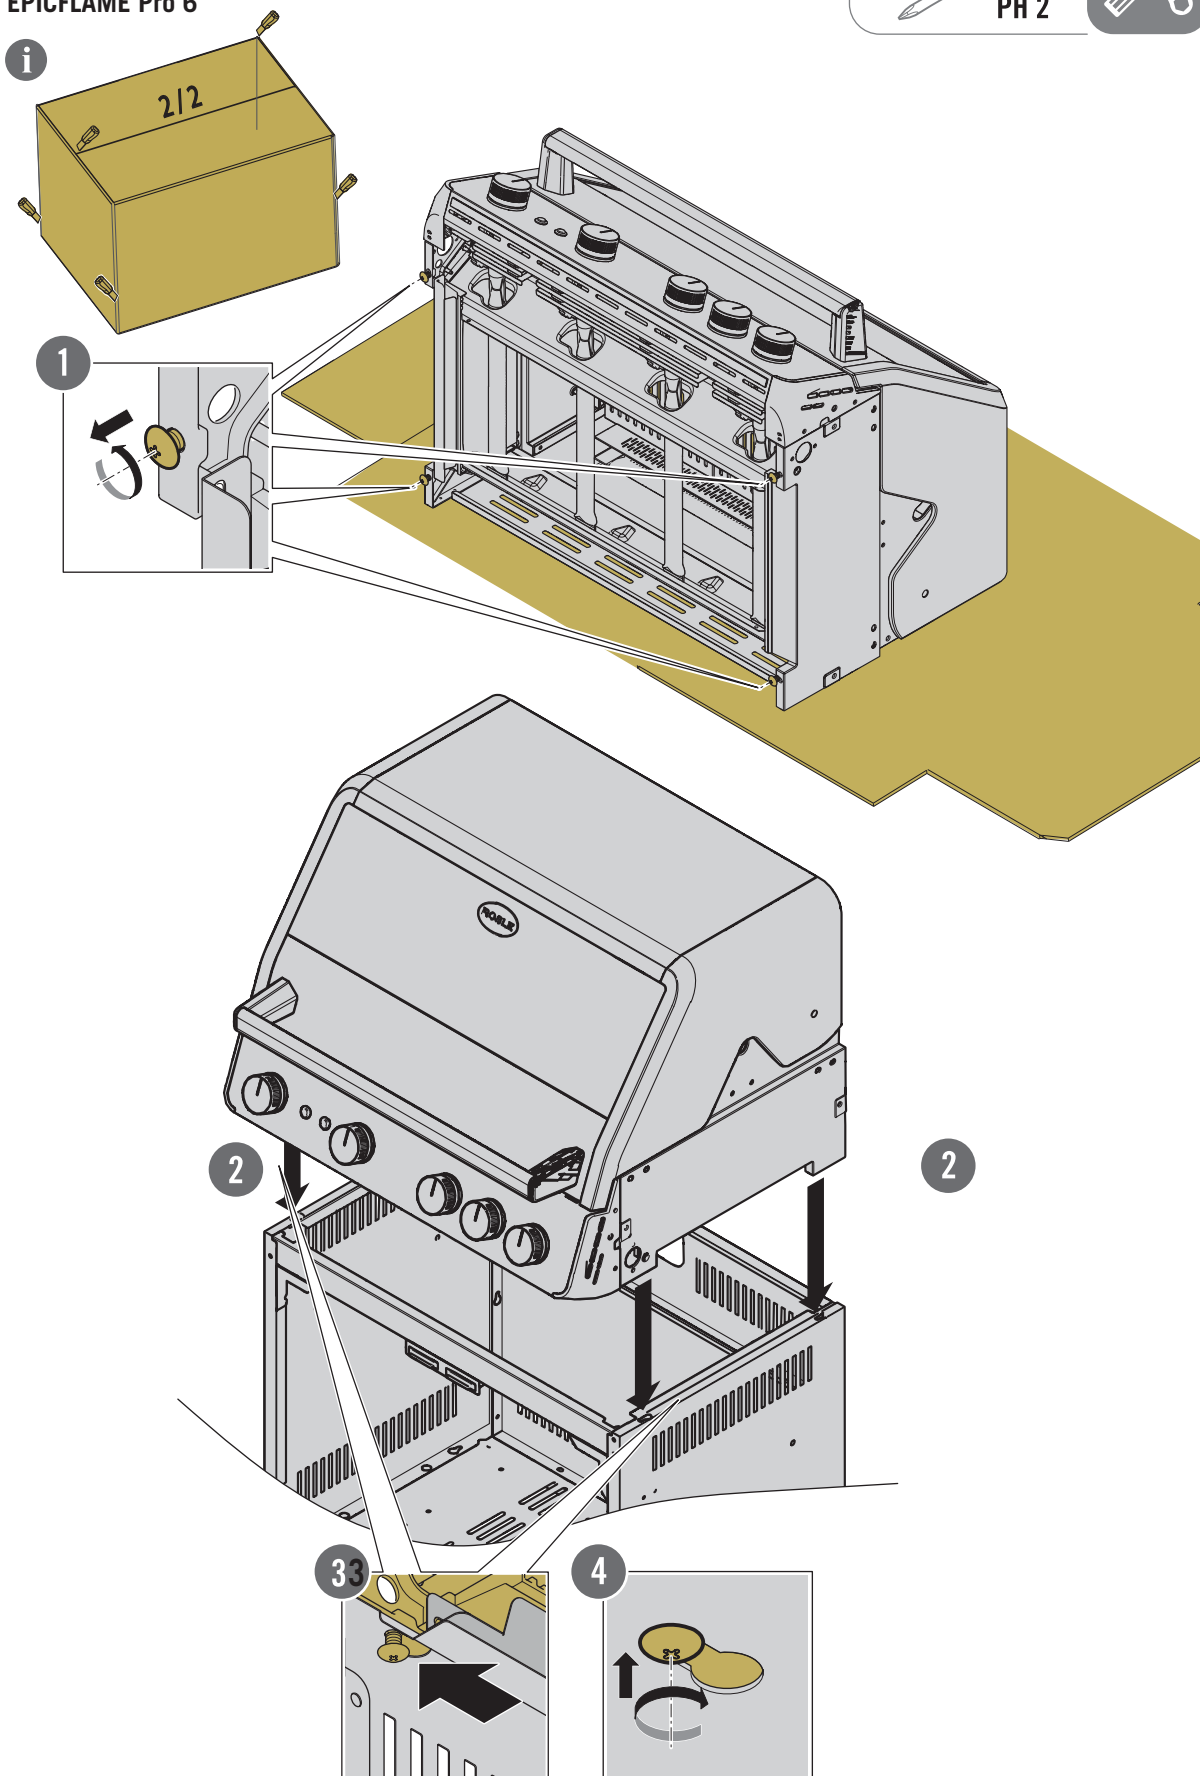

12.2025



11

EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6




PH 2



2x E



 2x K1

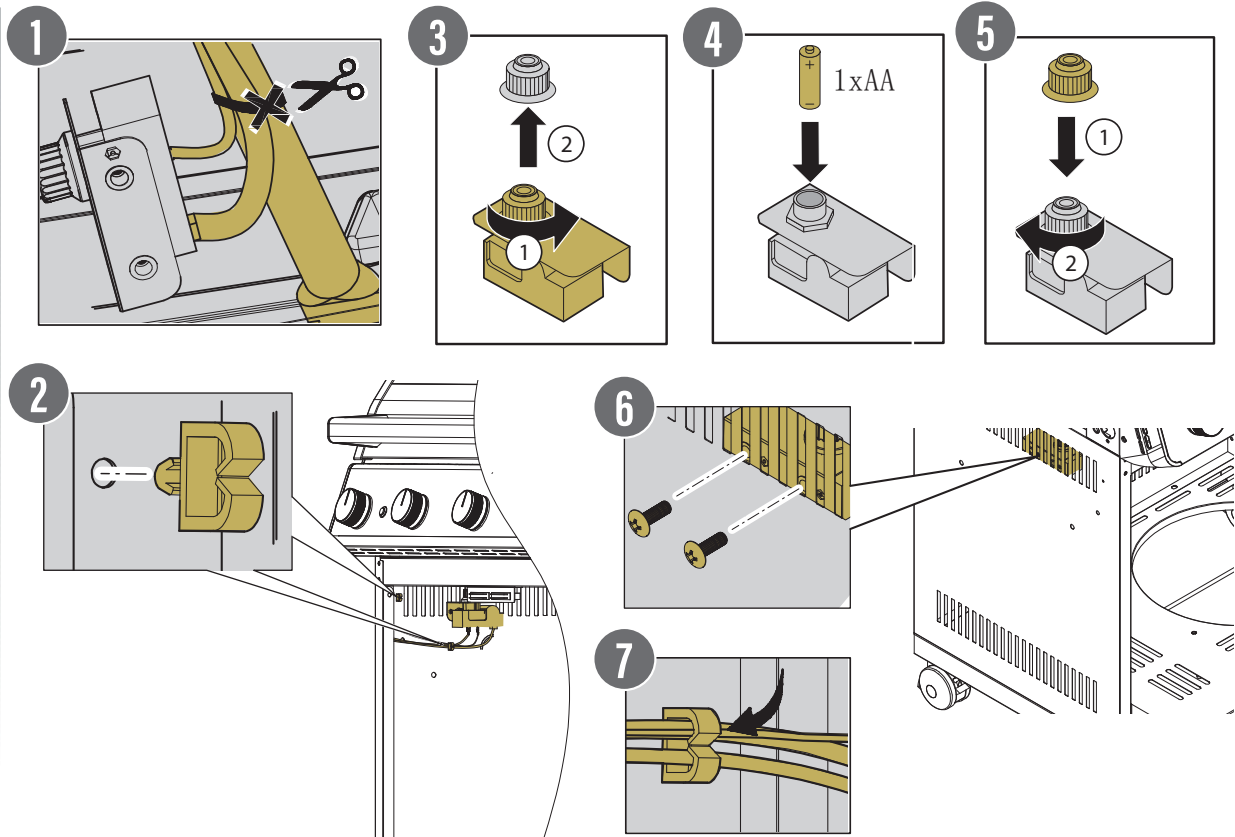


12

EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6



PH 2

 7x A





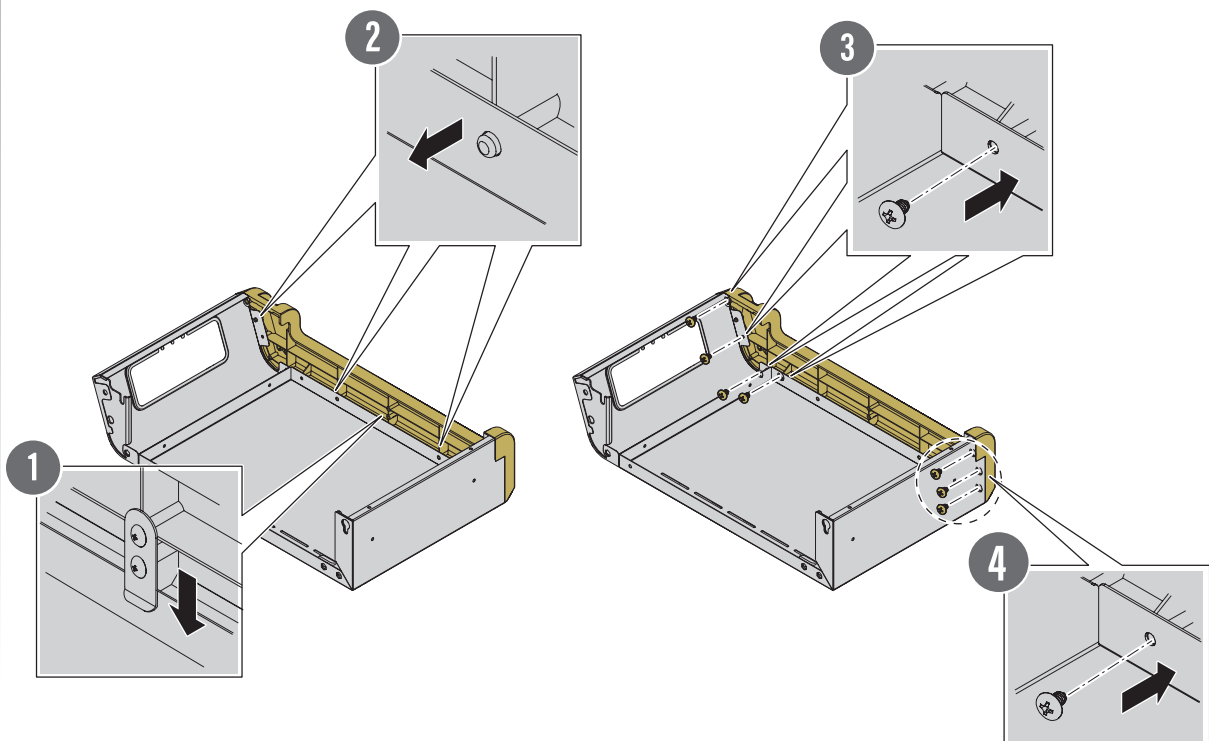


12.2025






13

     EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

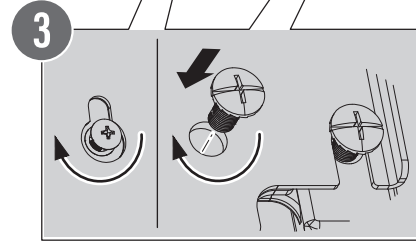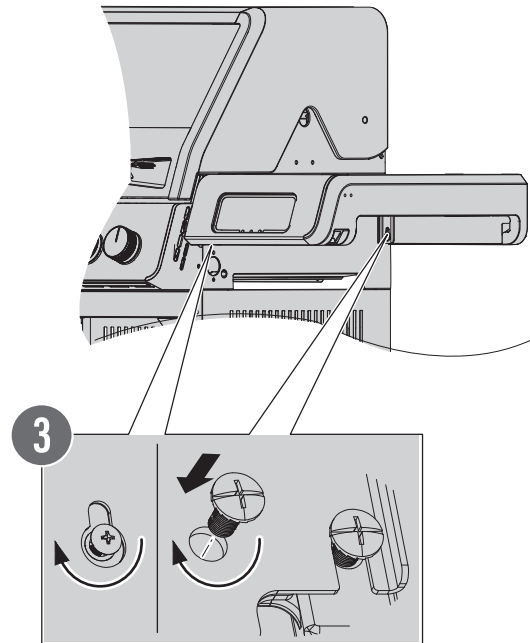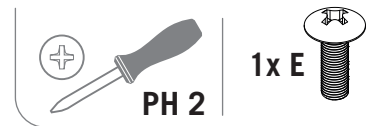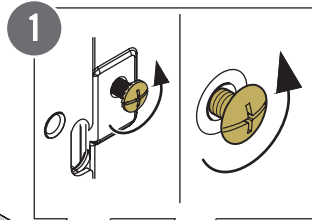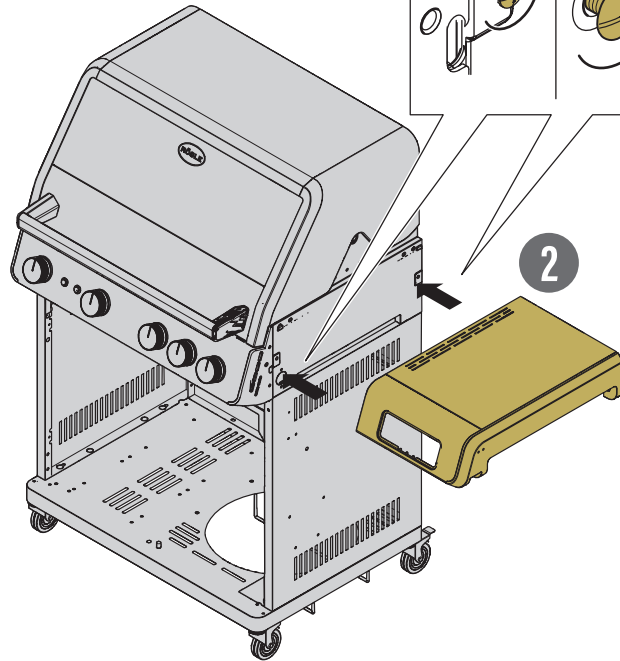

14

   EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

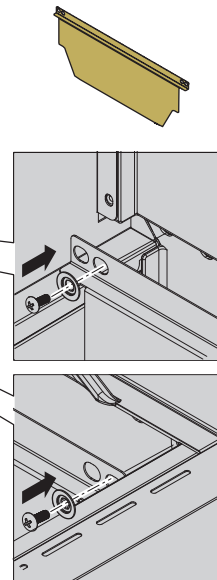
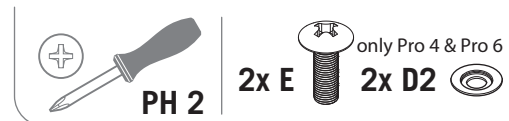
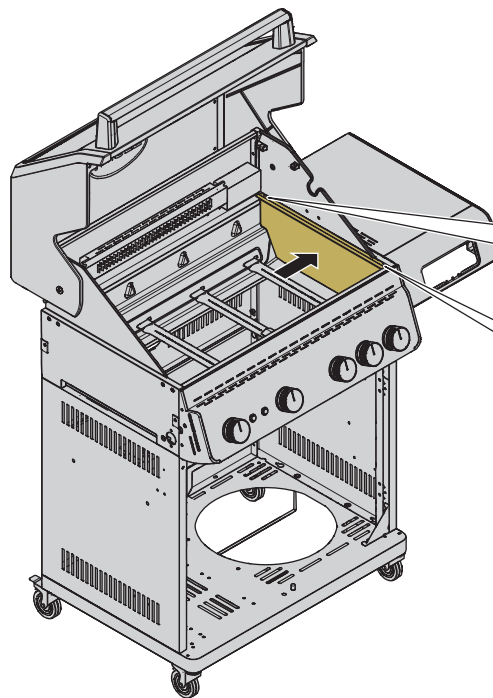


12.2025



15

   
EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

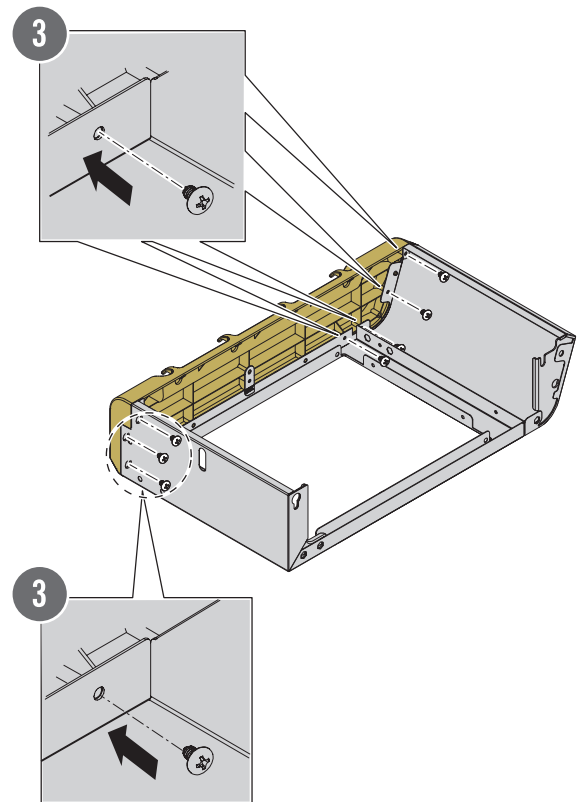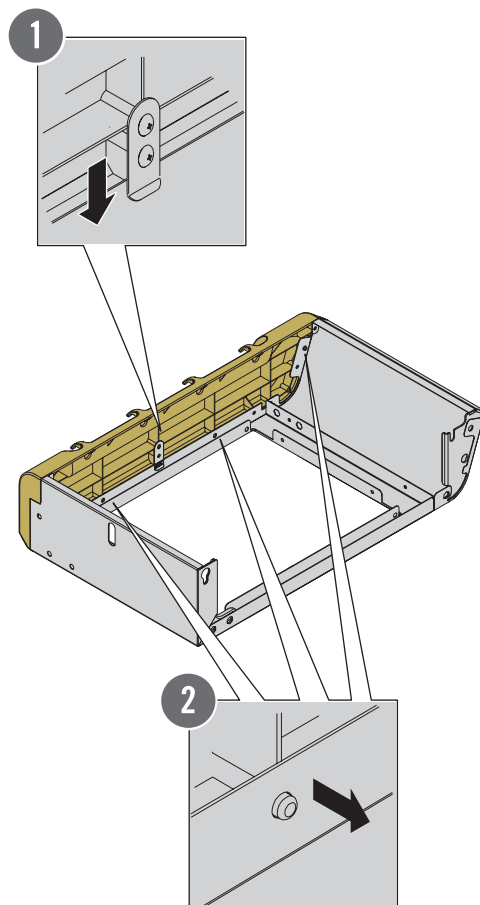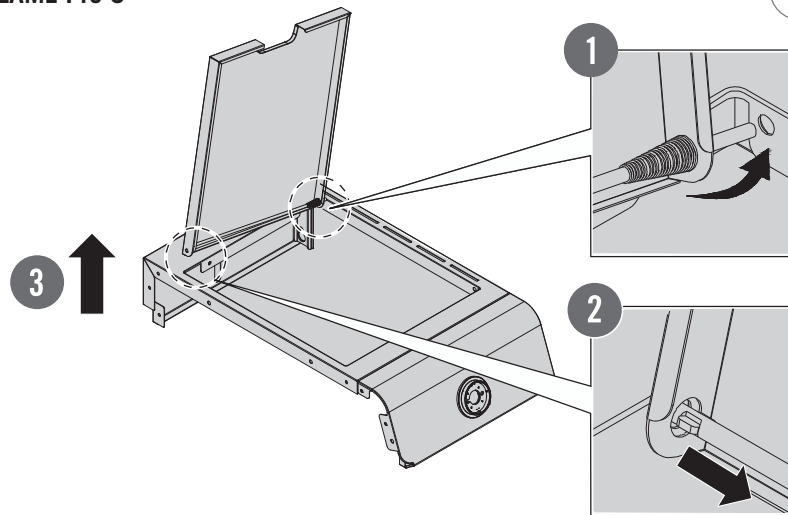




16

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

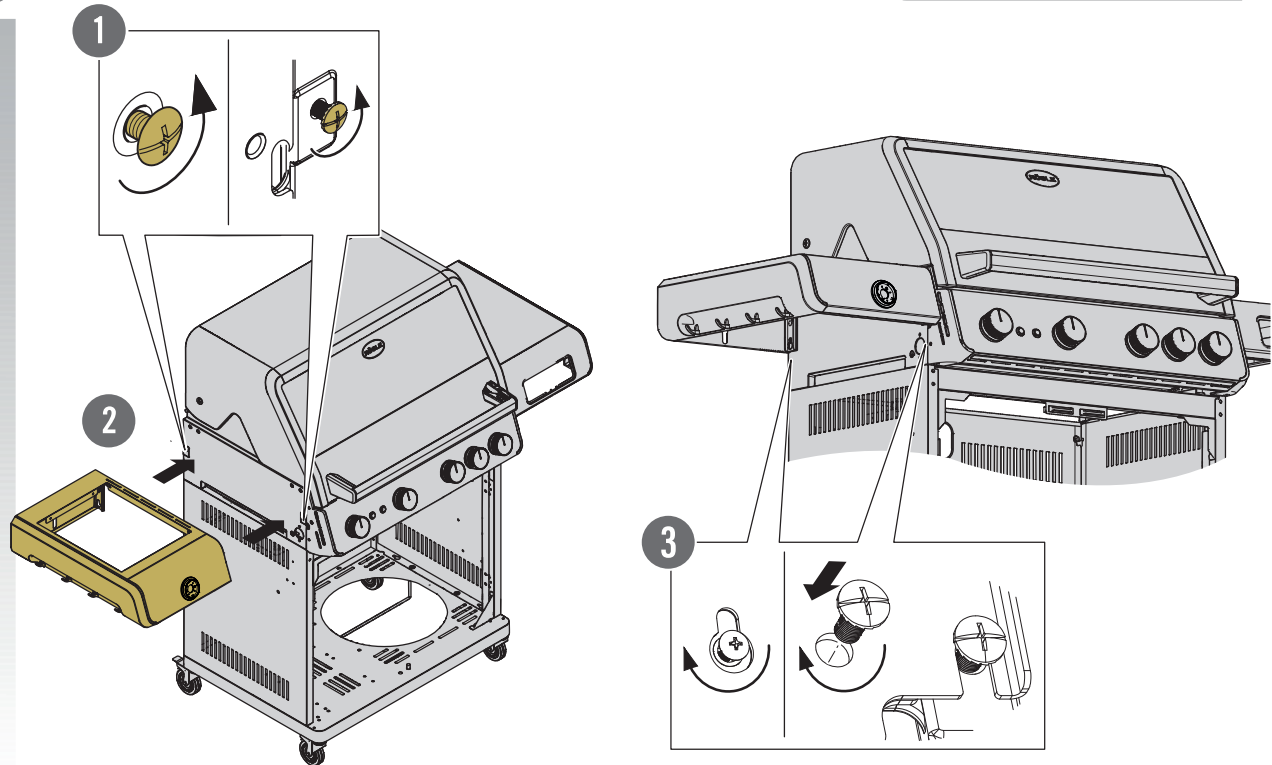

17

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

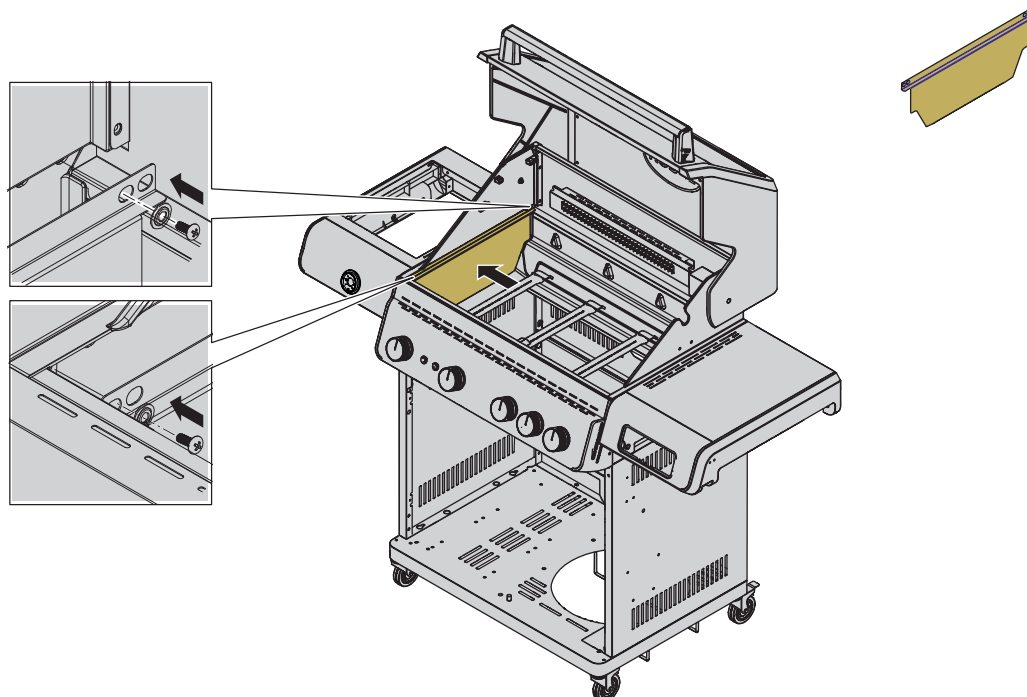


12.2025





18

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

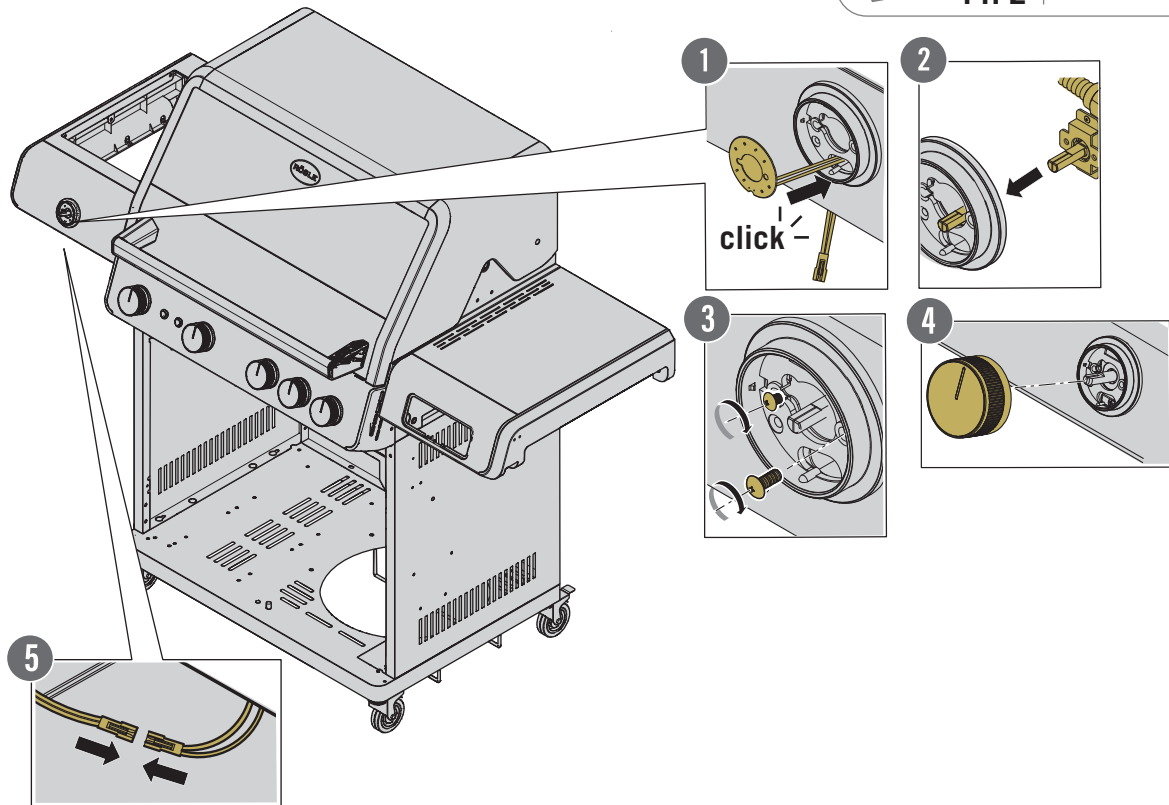

19

  EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

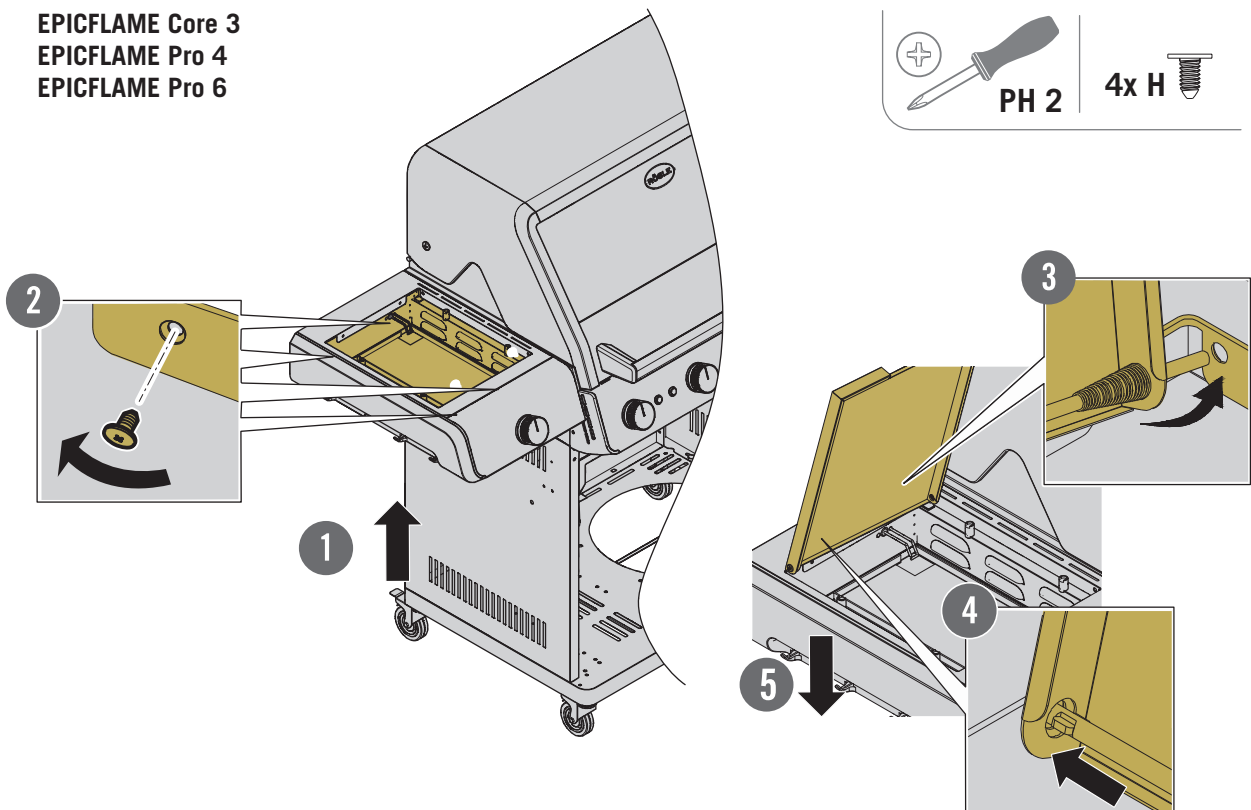


12.2025



20

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

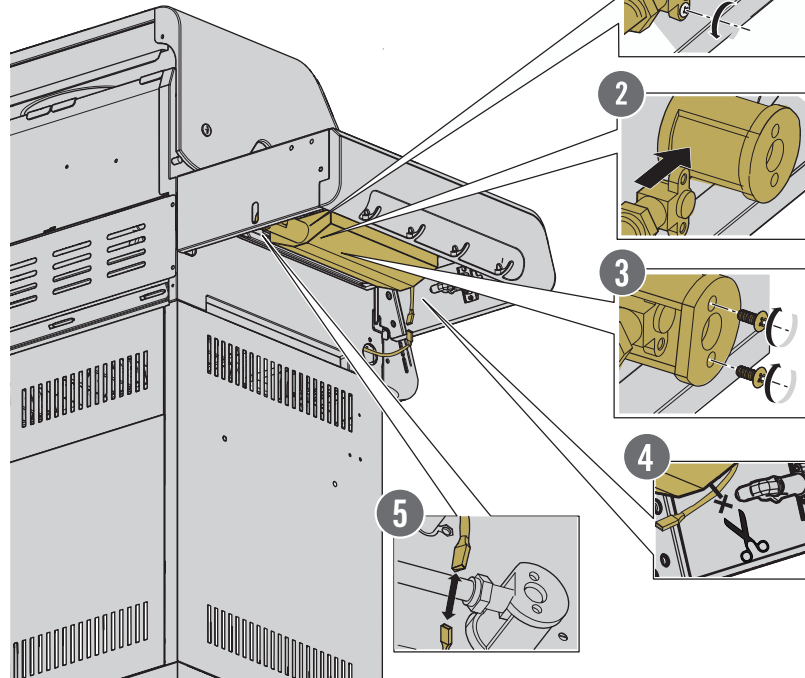


PH 2







21

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

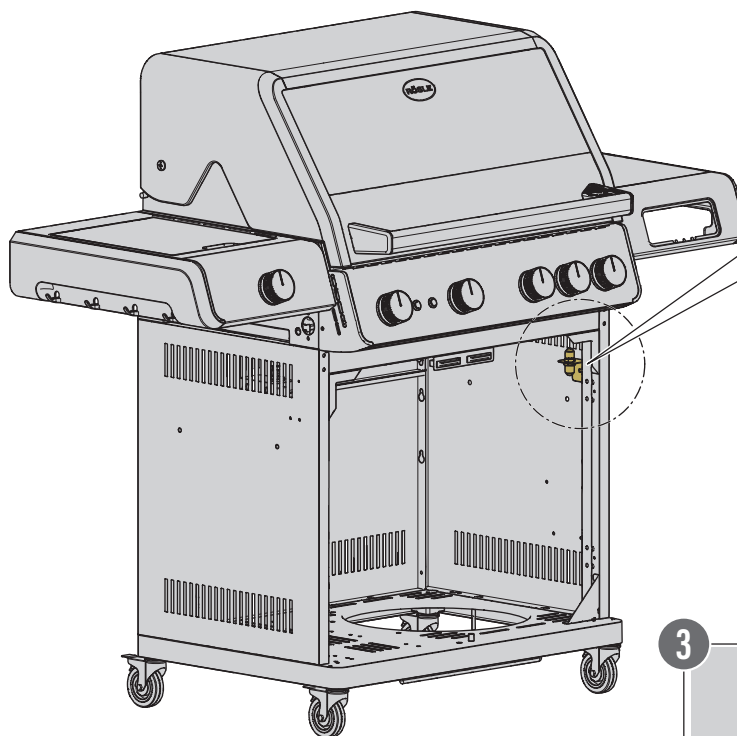

PH 2

    1x C

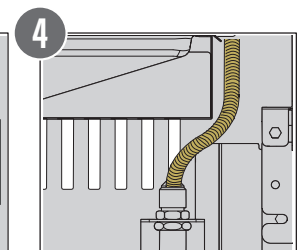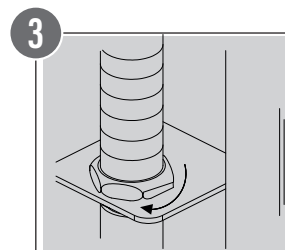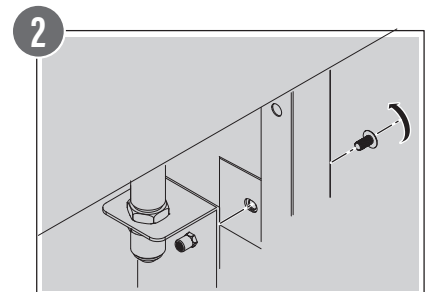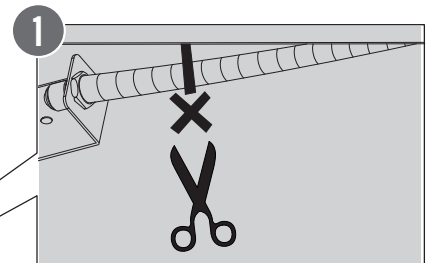

12.2025





22

EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6



PH 2




 
 
2x G

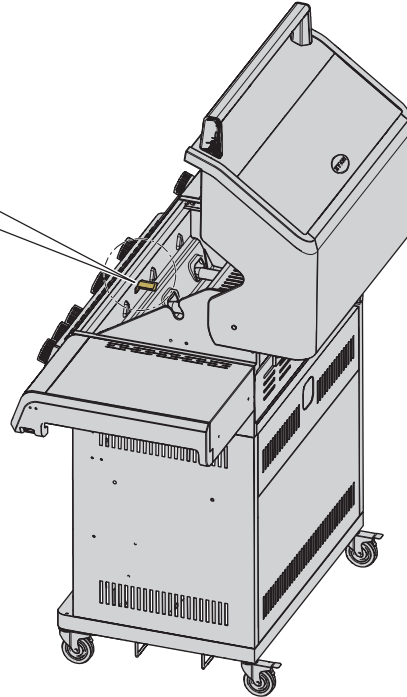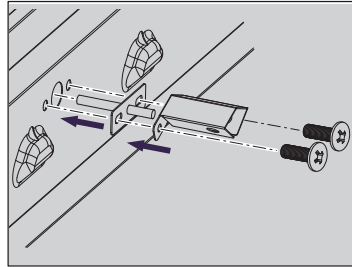

23

EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

     
1x K2

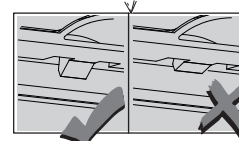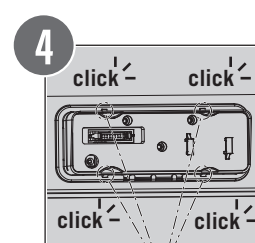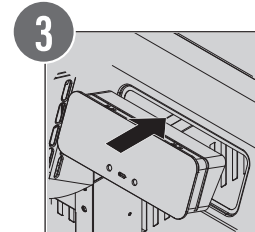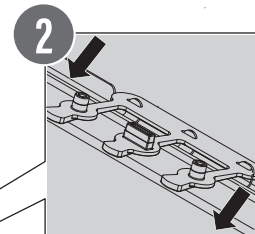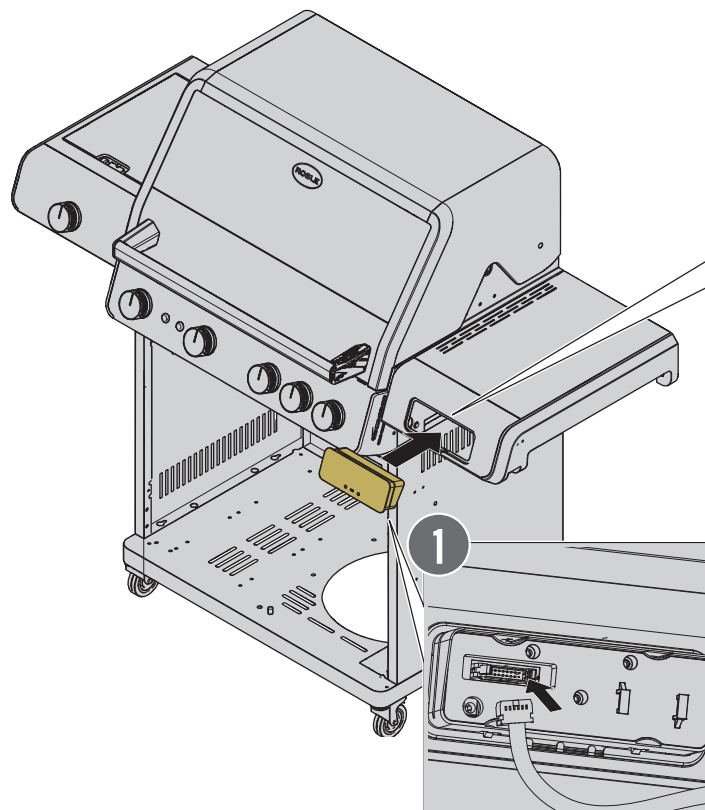




24

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

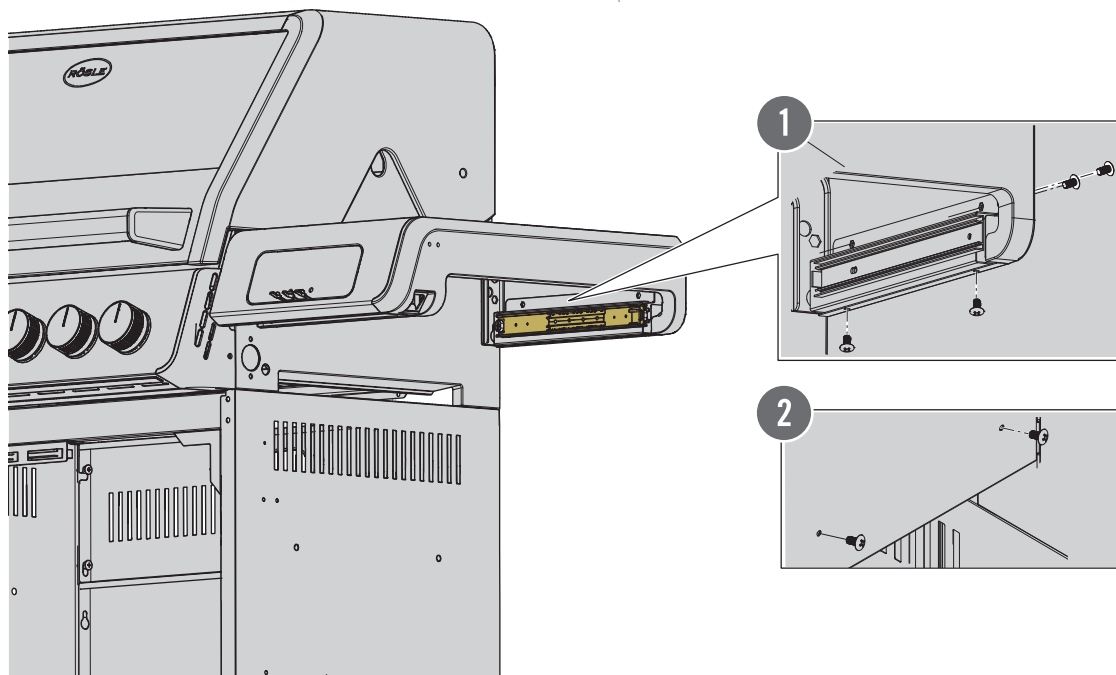

25

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6


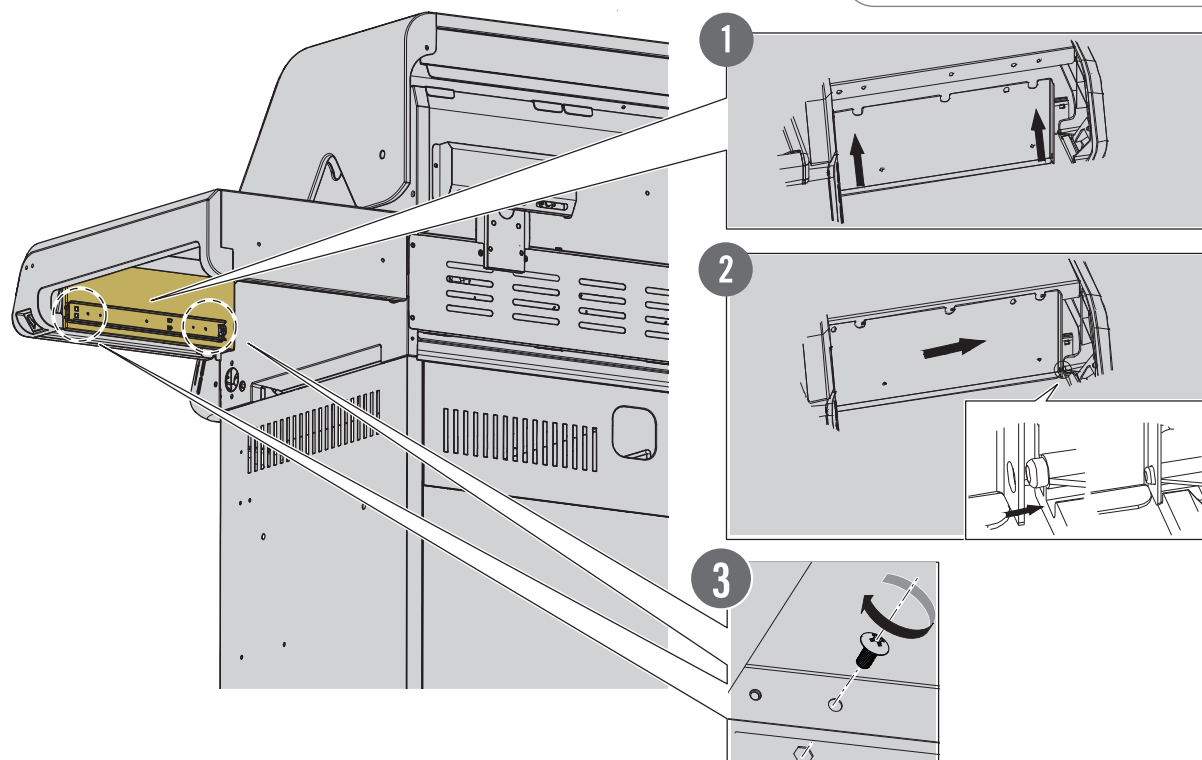


12.2025



26

  
EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

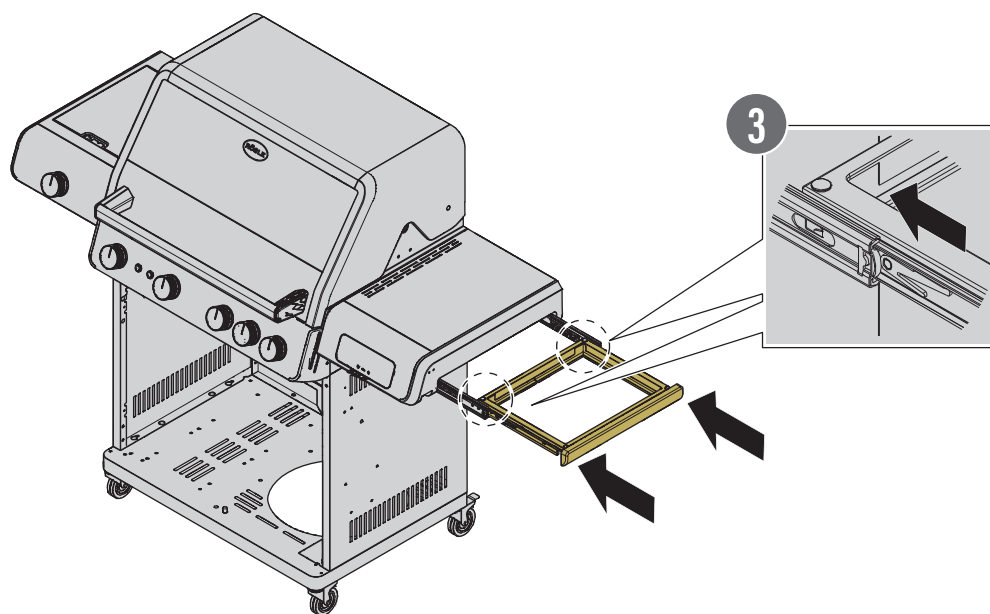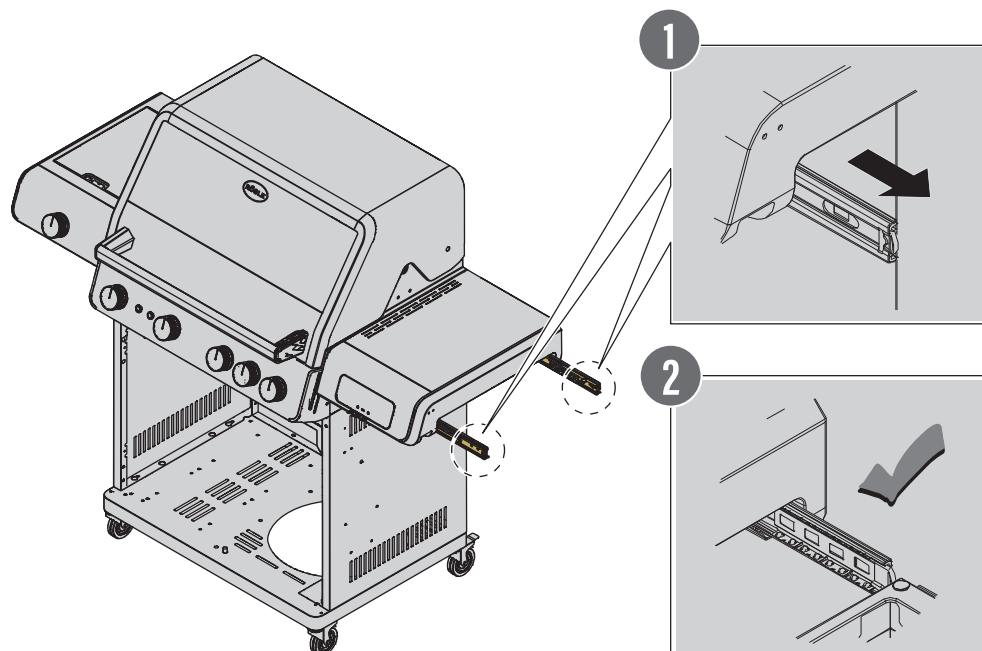




27

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

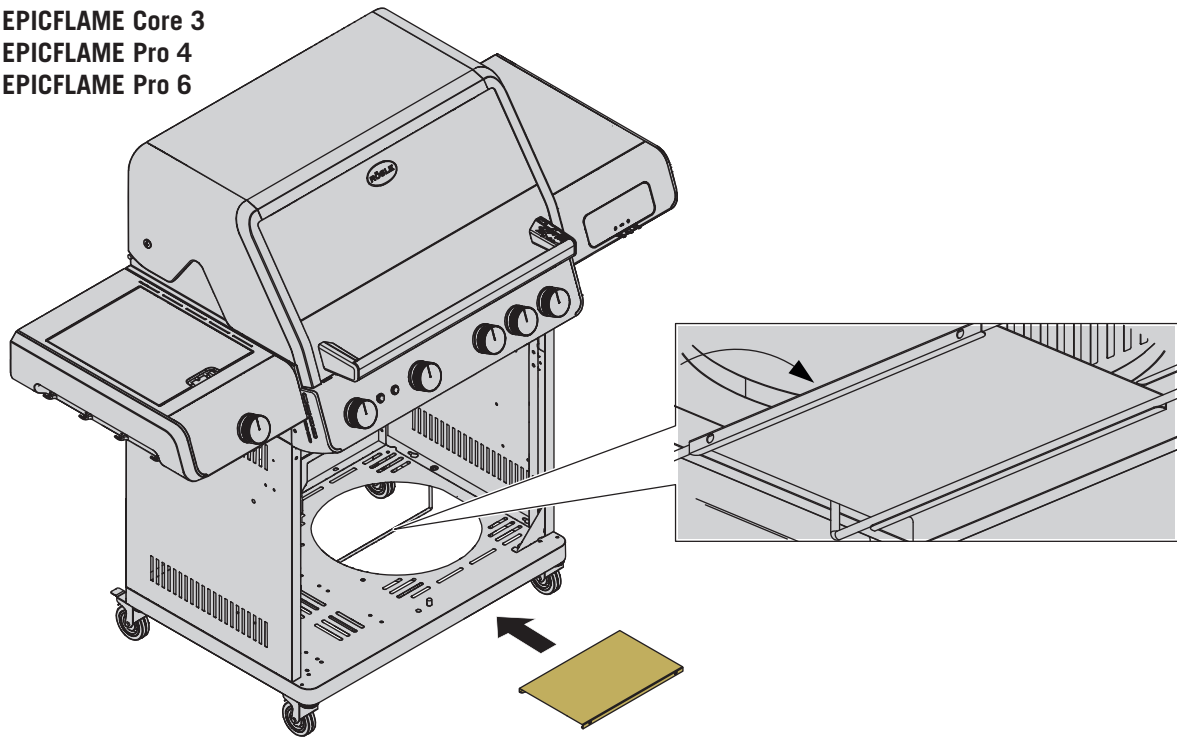

28





 
EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

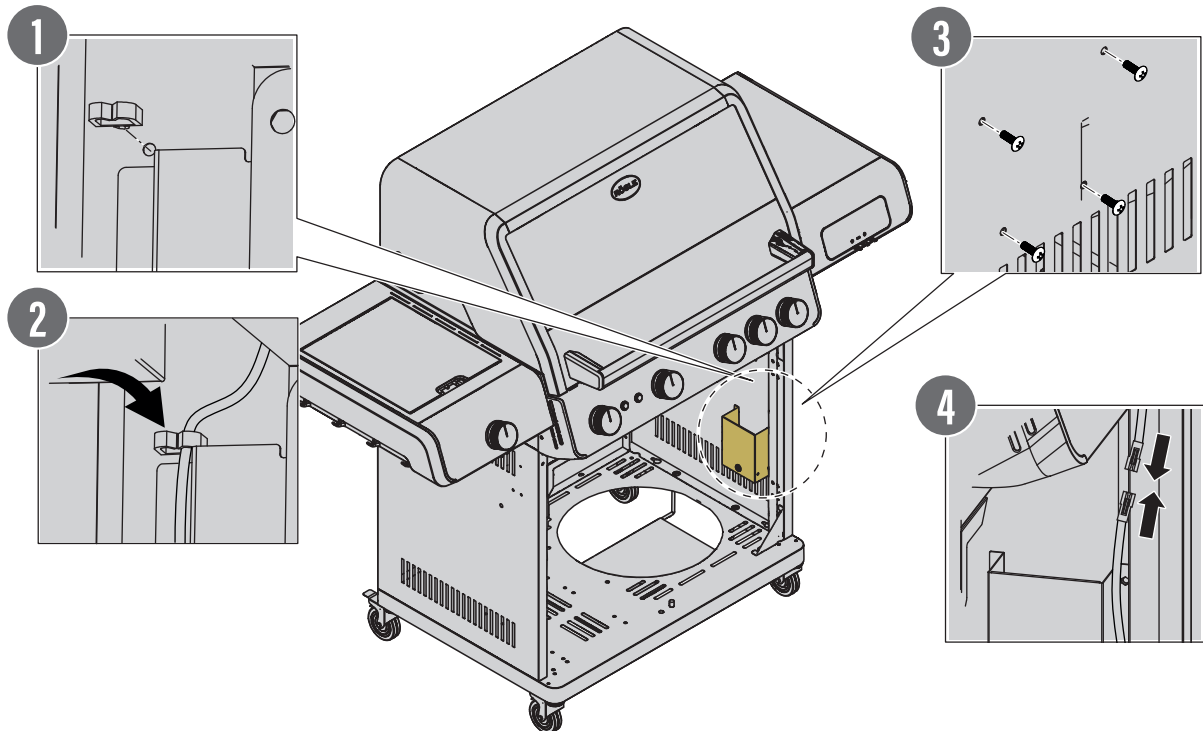







29

     EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

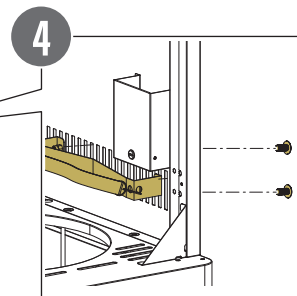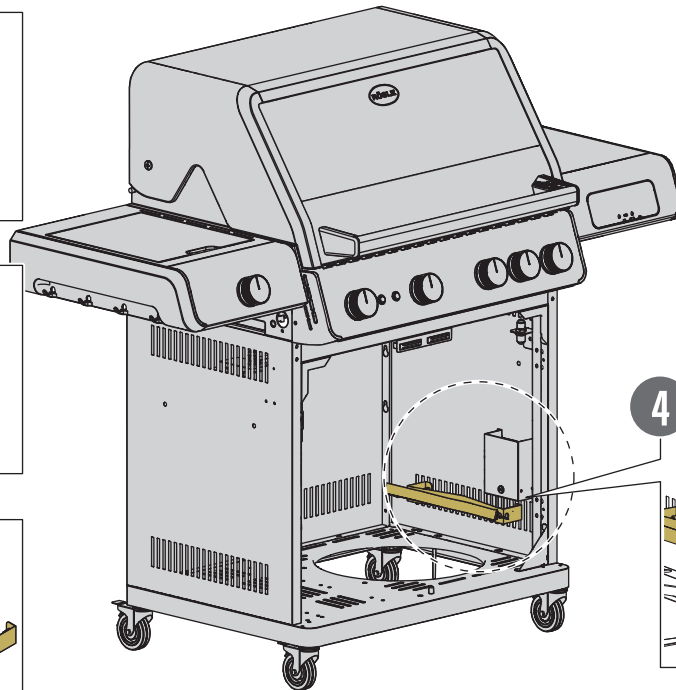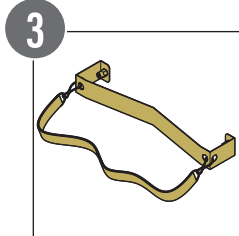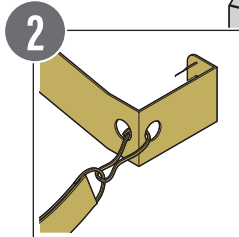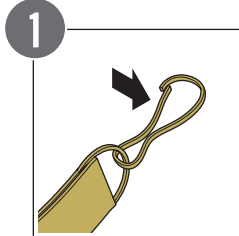

30

    
EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

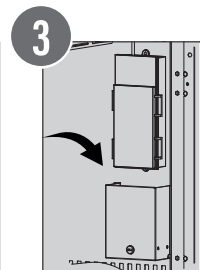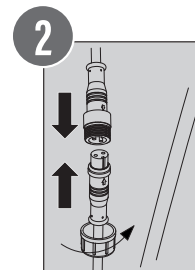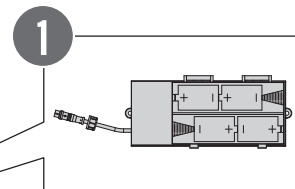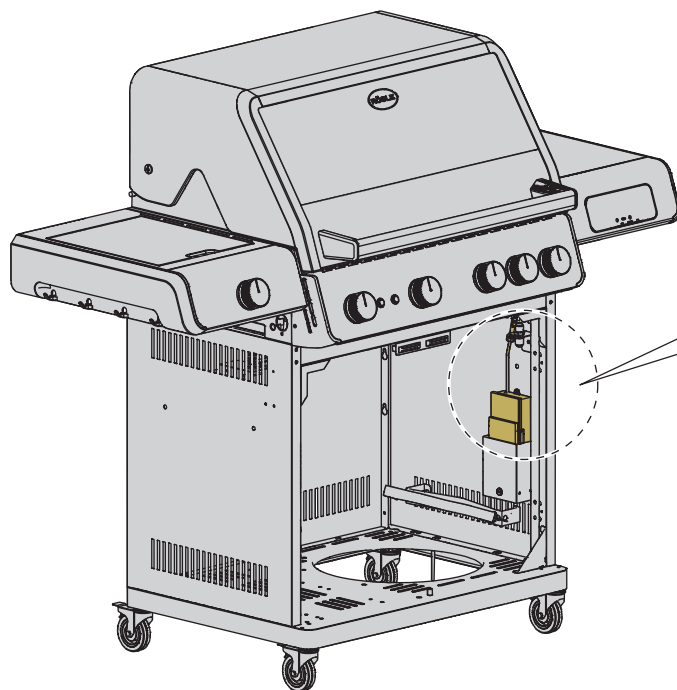




31A

 EPICFLAME Core 3

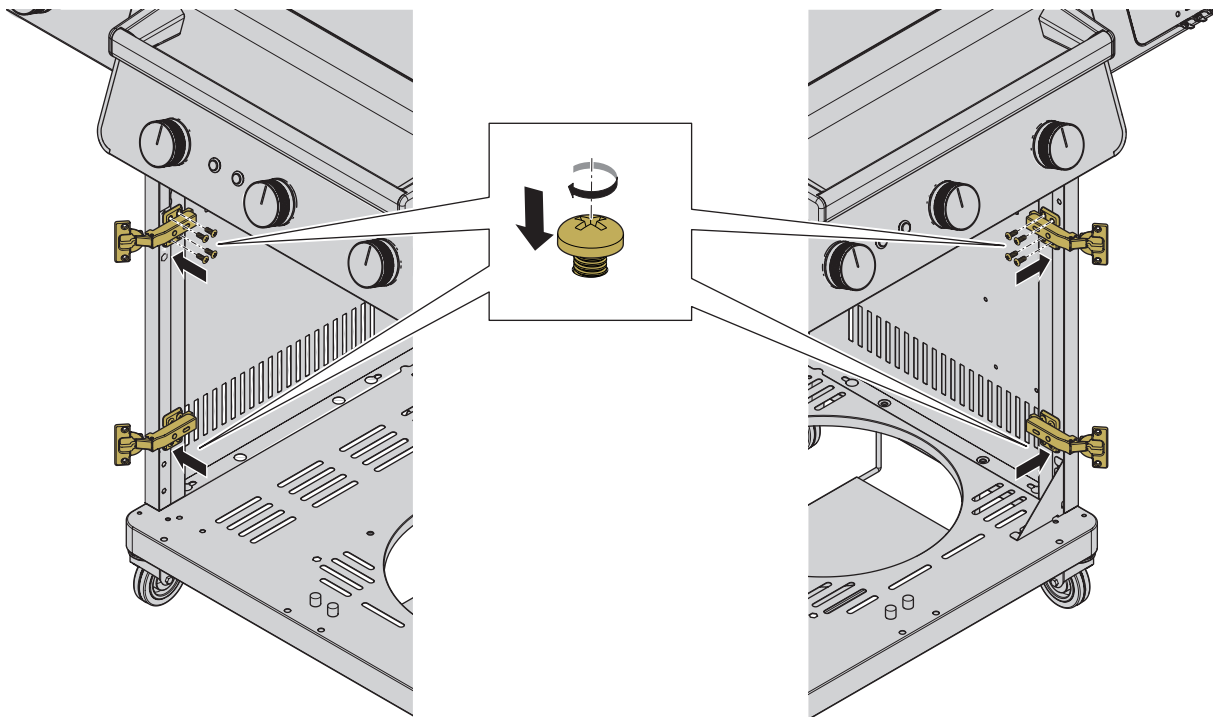

32A

 EPICFLAME Core 3

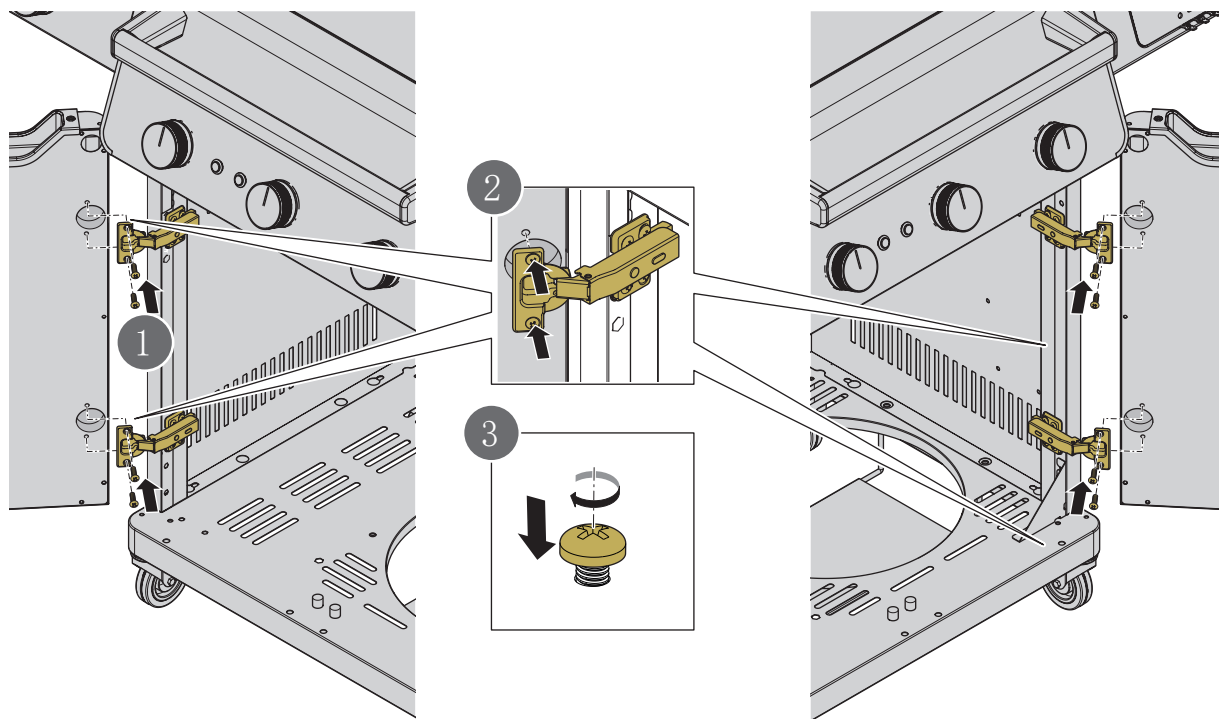


12.2025




33A

 EPICFLAME Core 3


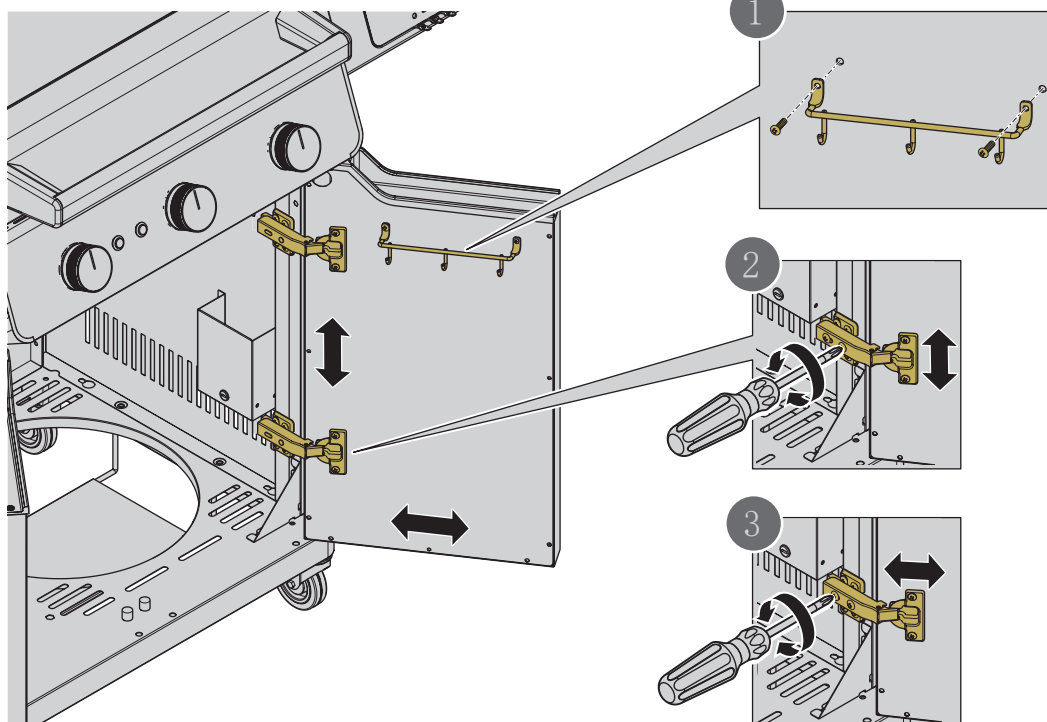


34A

 EPICFLAME Core 3



2 x

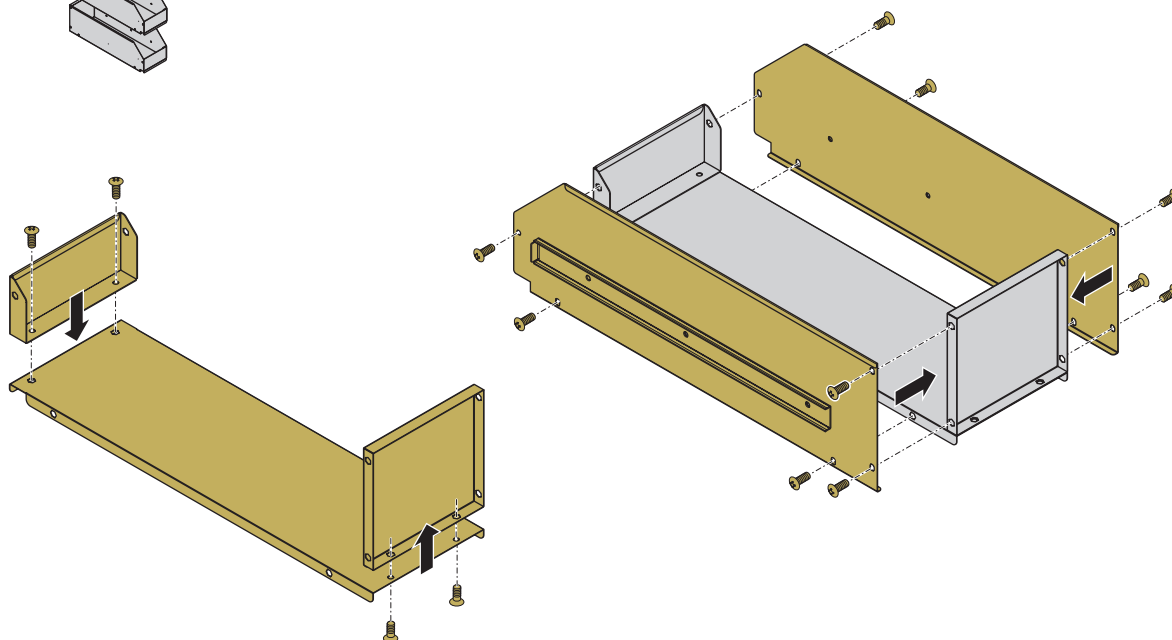  

12.2025



 
 


35A

EPICFLAME Core 3





16x C

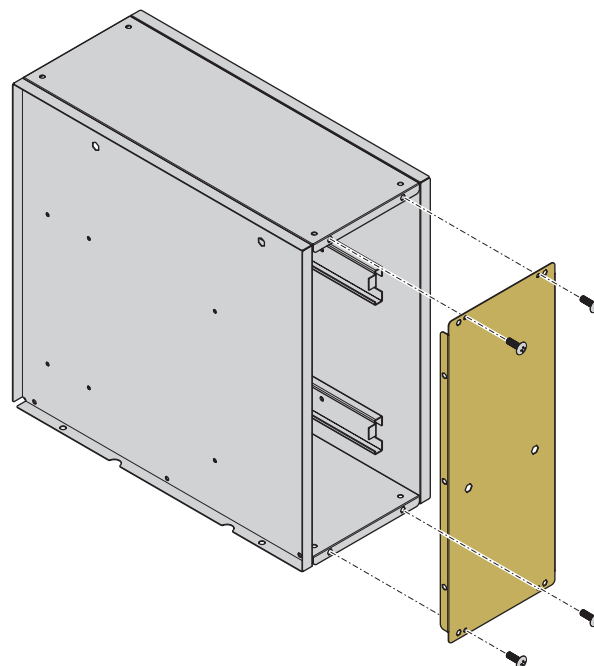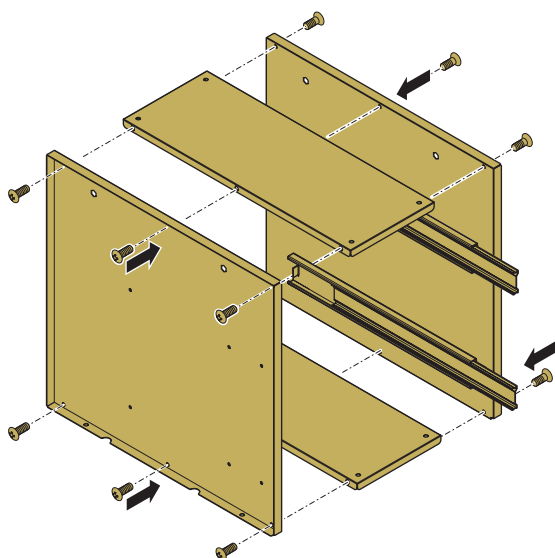

36A

  EPICFLAME Core 3

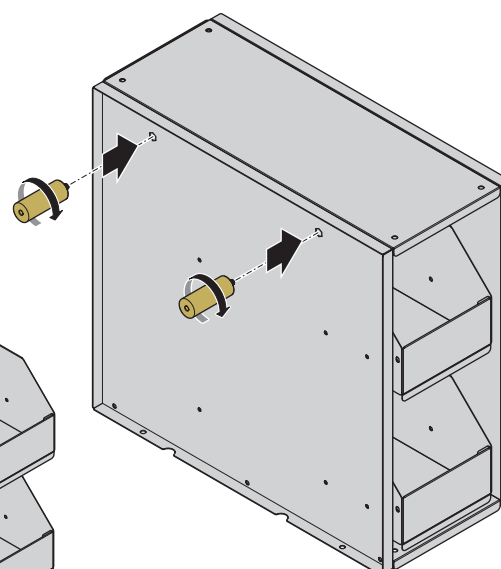
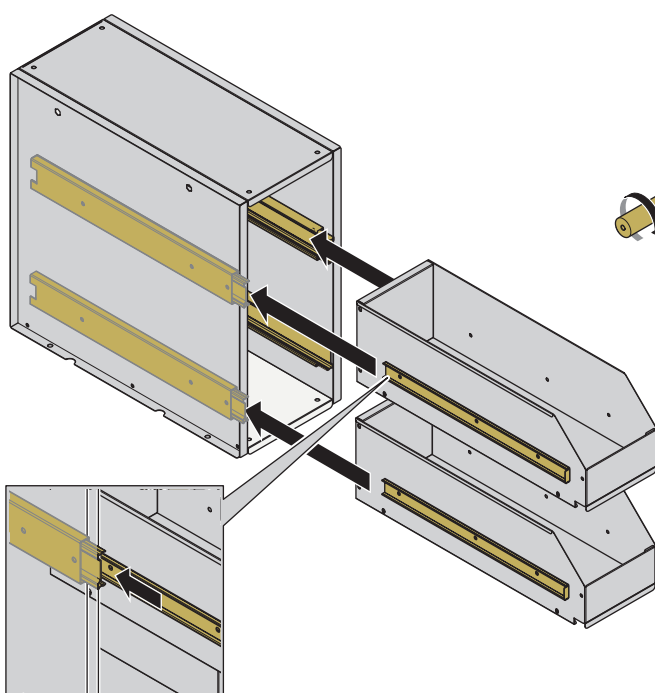


12.2025



37A

  EPICFLAME Core 3

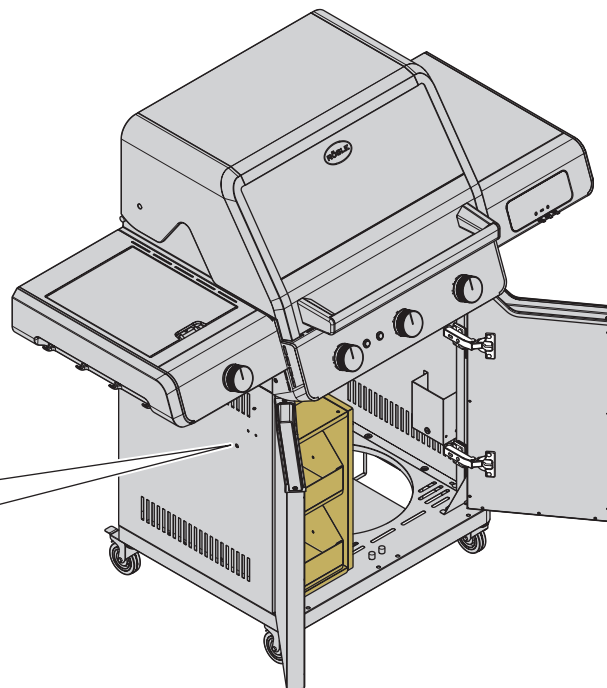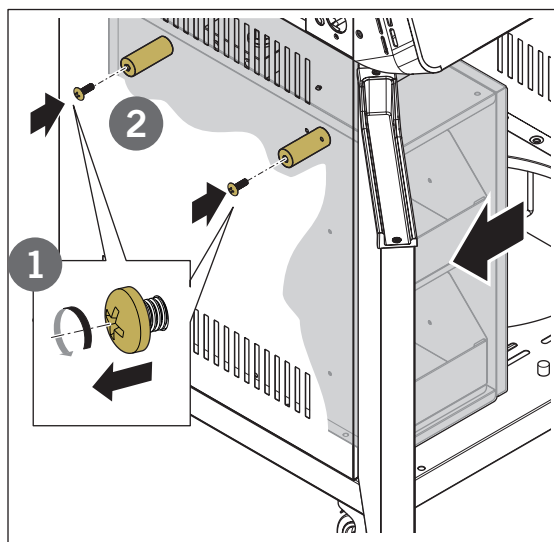



38A

EPICFLAME Core 3



PH 2

 
 
2x E

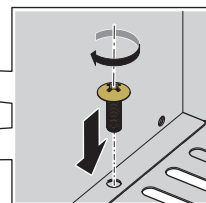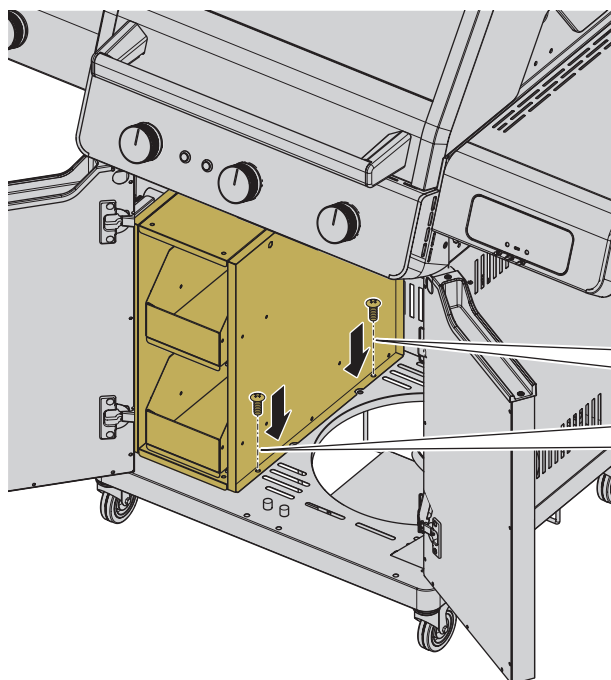




31B

  EPICFLAME Pro 4
EPICFLAME Pro 6

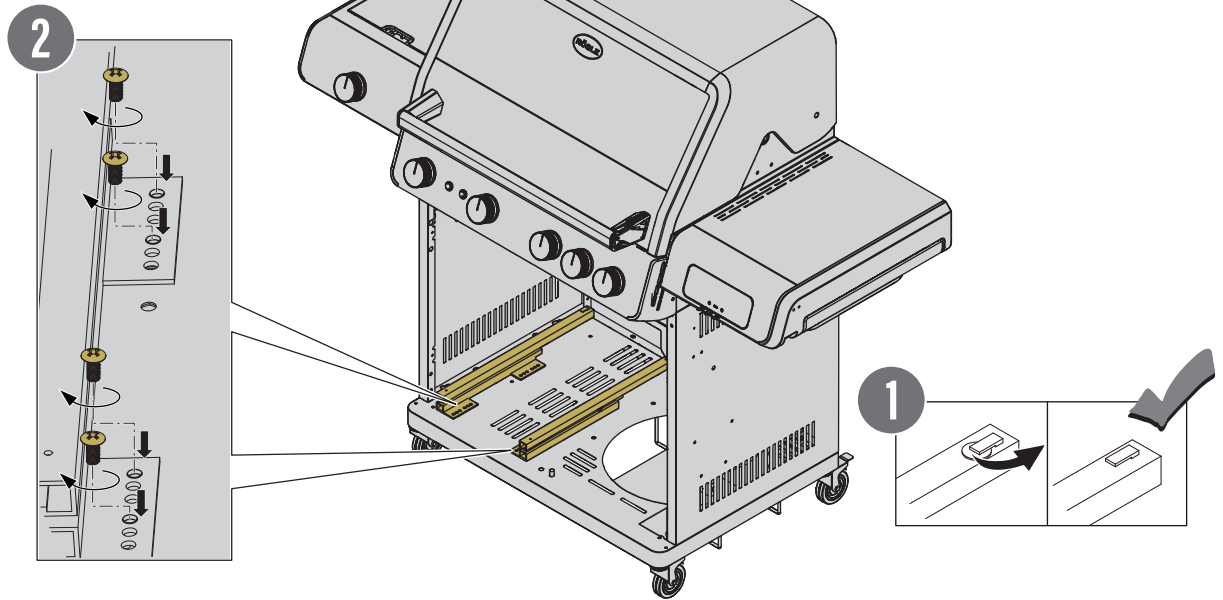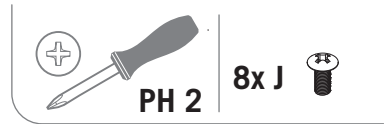

32B

 EPICFLAME Pro 4
EPICFLAME Pro 6


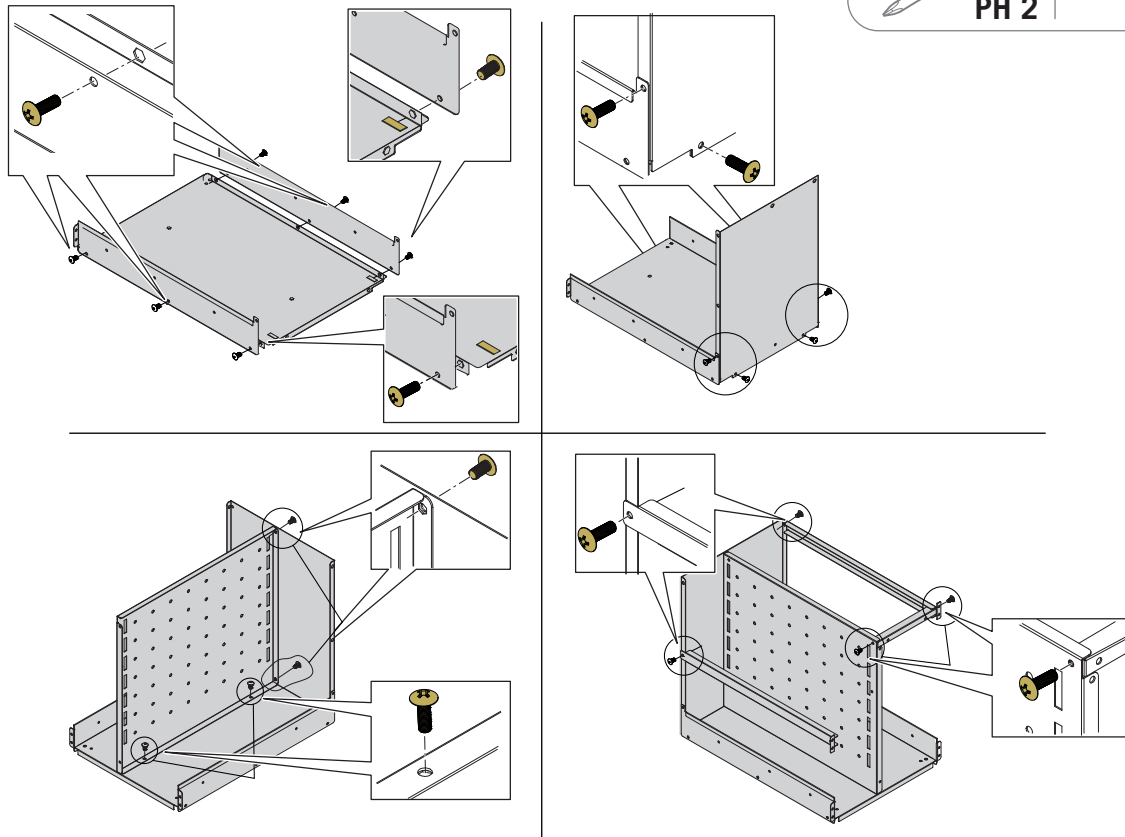


12.2025





33B

  EPICFLAME Pro 4
EPICFLAME Pro 6

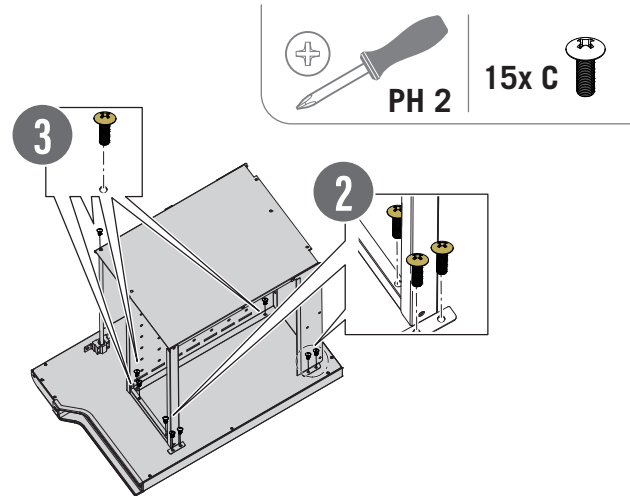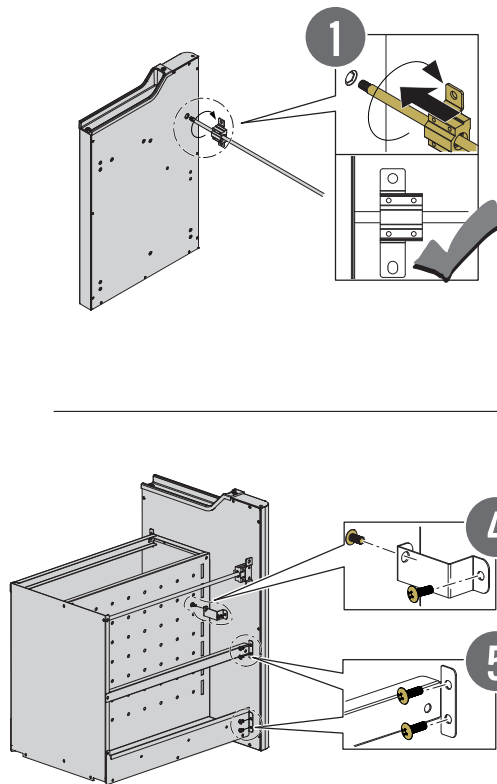

34B

  
EPICFLAME Pro 4
EPICFLAME Pro 6

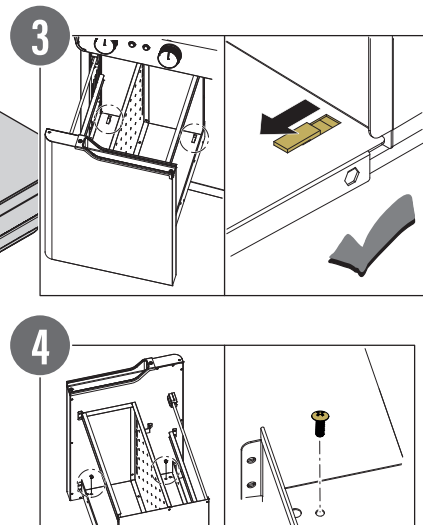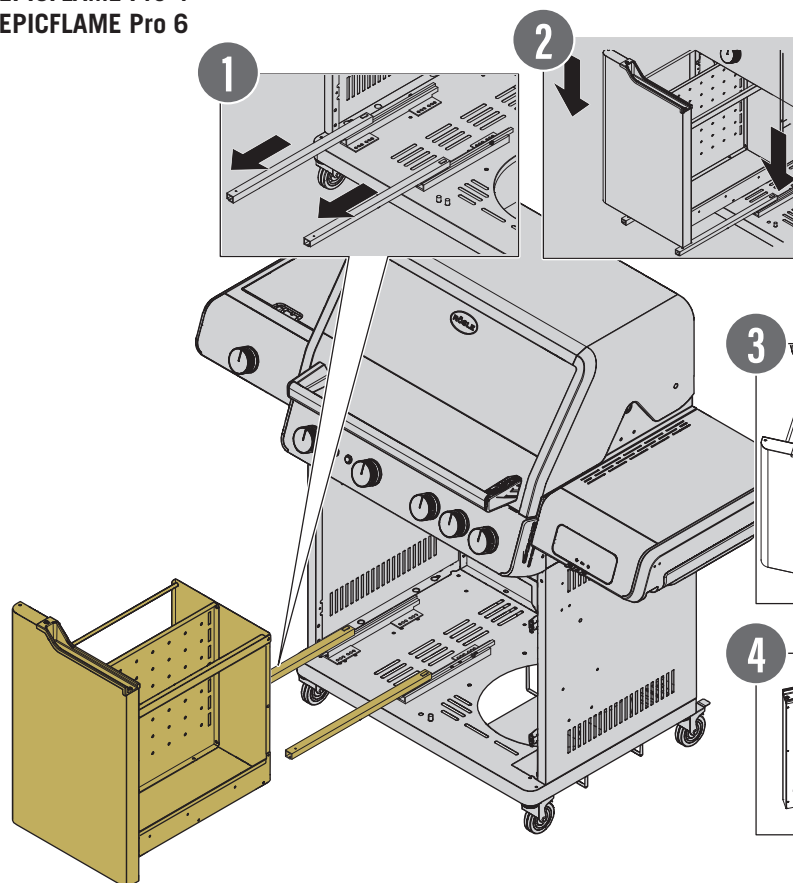




35B

 EPICFLAME Pro 4
EPICFLAME Pro 6

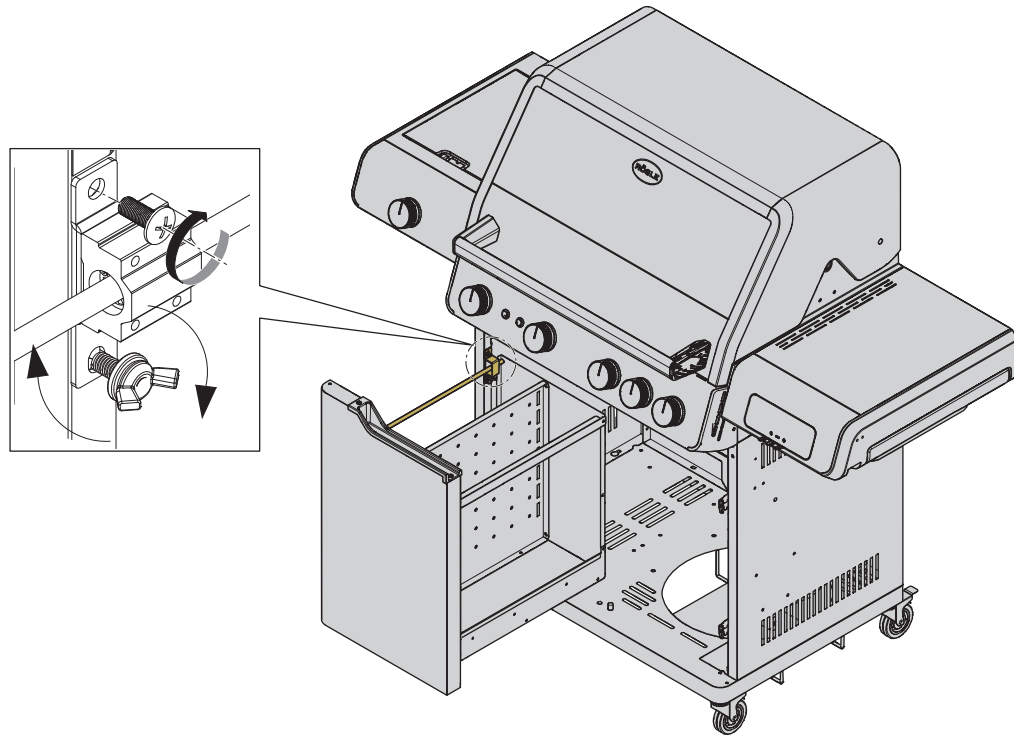

36B

 EPICFLAME Pro 4
EPICFLAME Pro 6





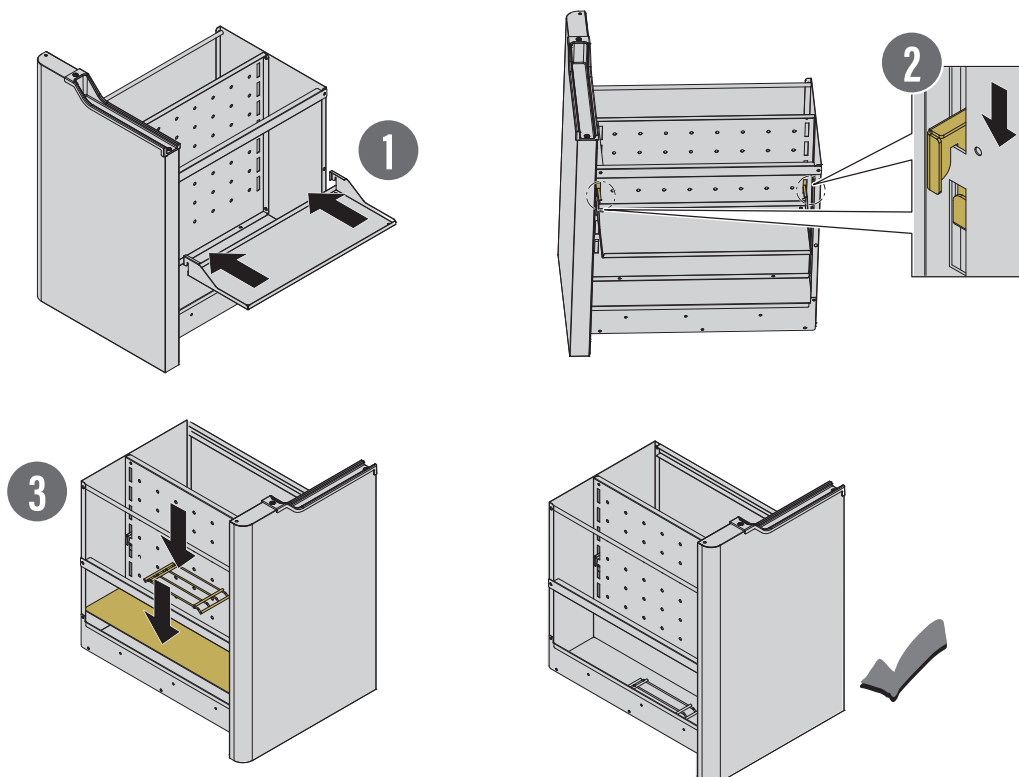


12.2025








37B

     EPICFLAME Pro 4
EPICFLAME Pro 6

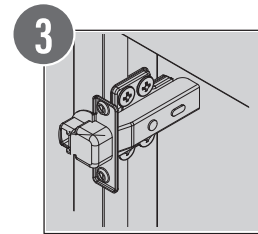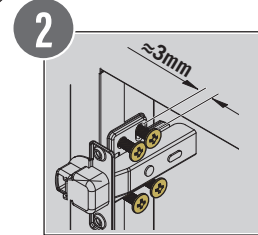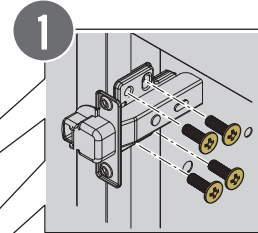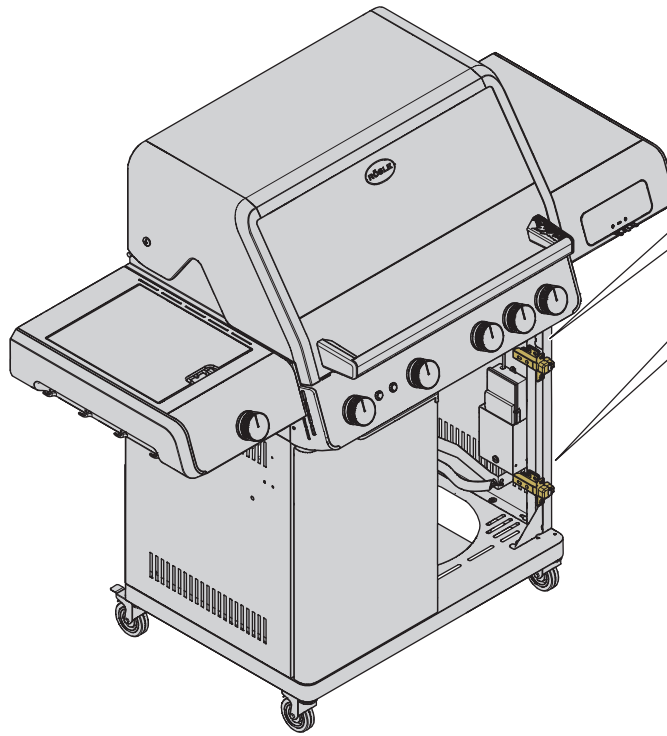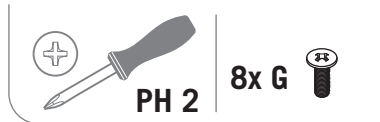

38B

     EPICFLAME Pro 4
EPICFLAME Pro 6

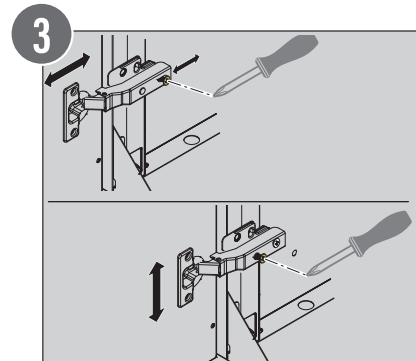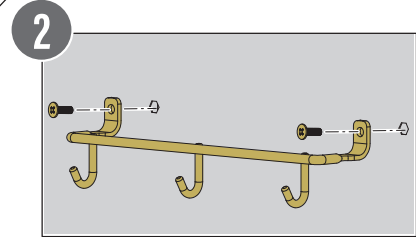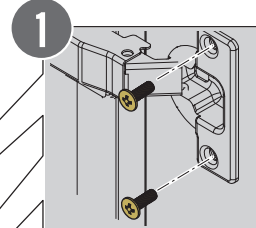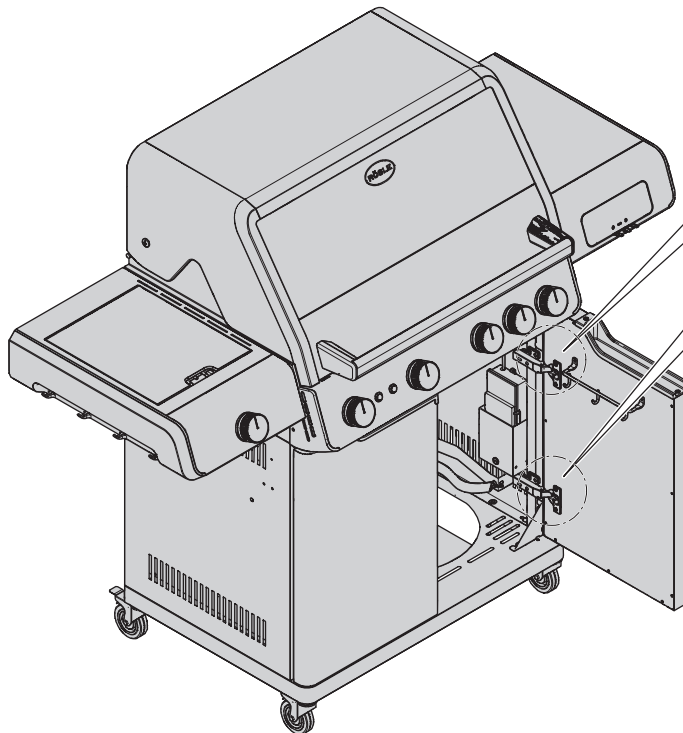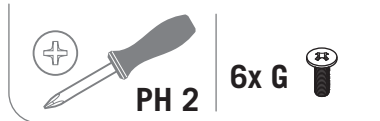

12.2025












39

EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6



      
 
PH 2

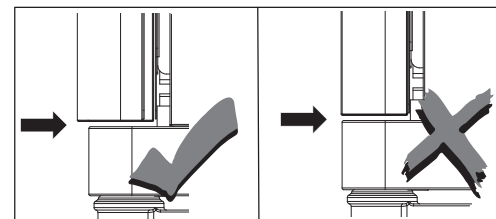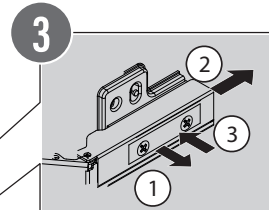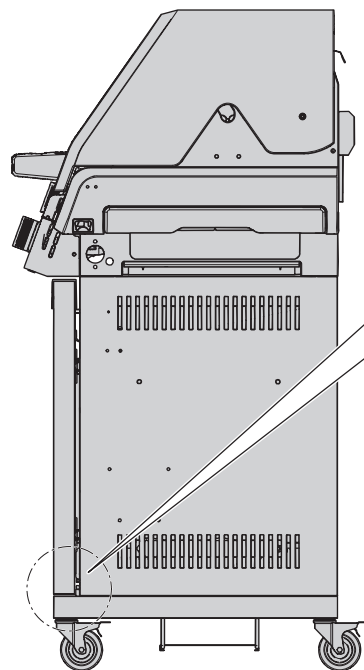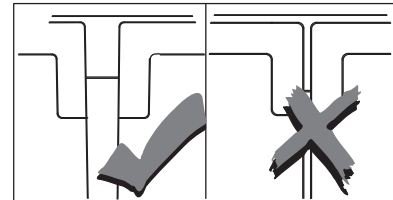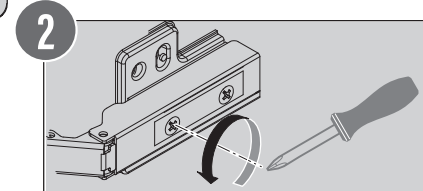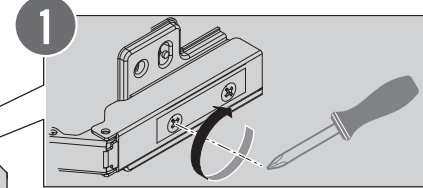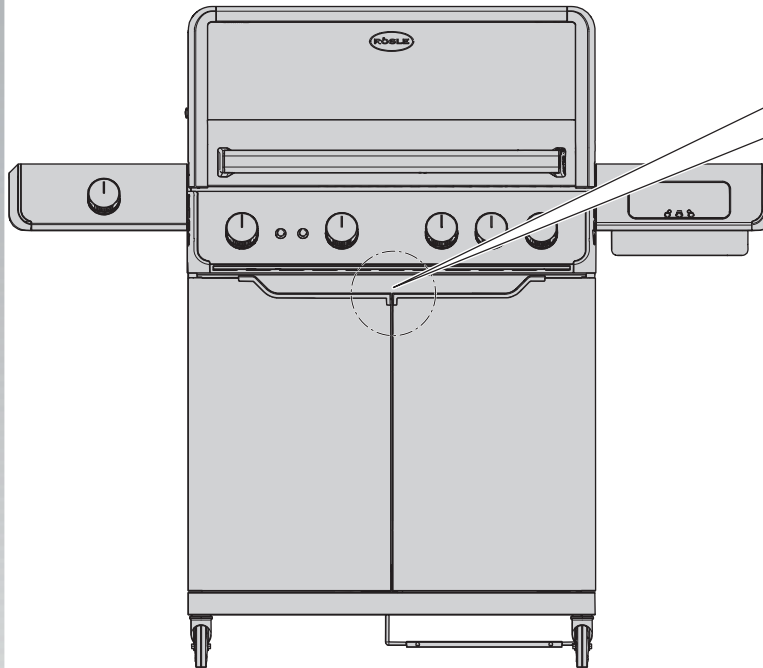




40

  EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

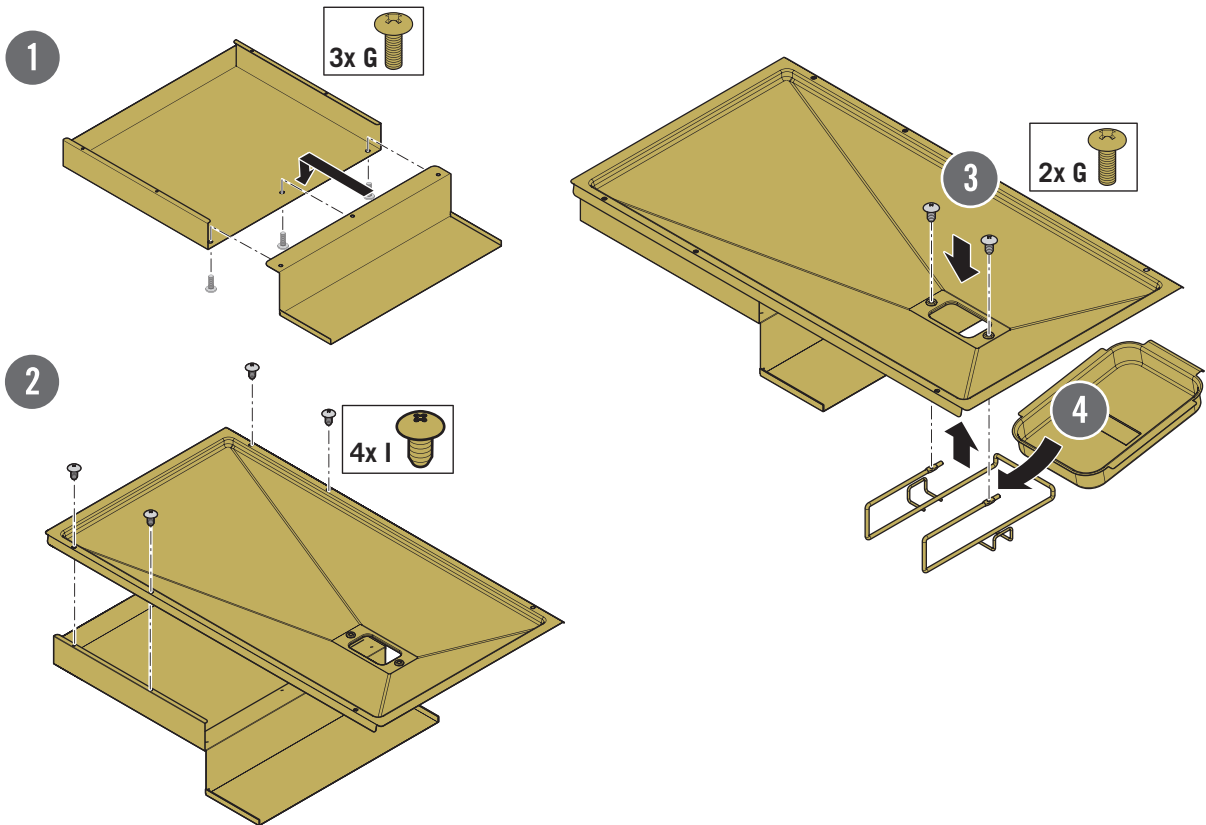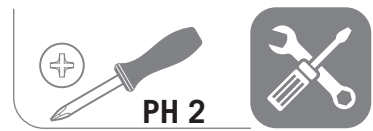

41

 EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6


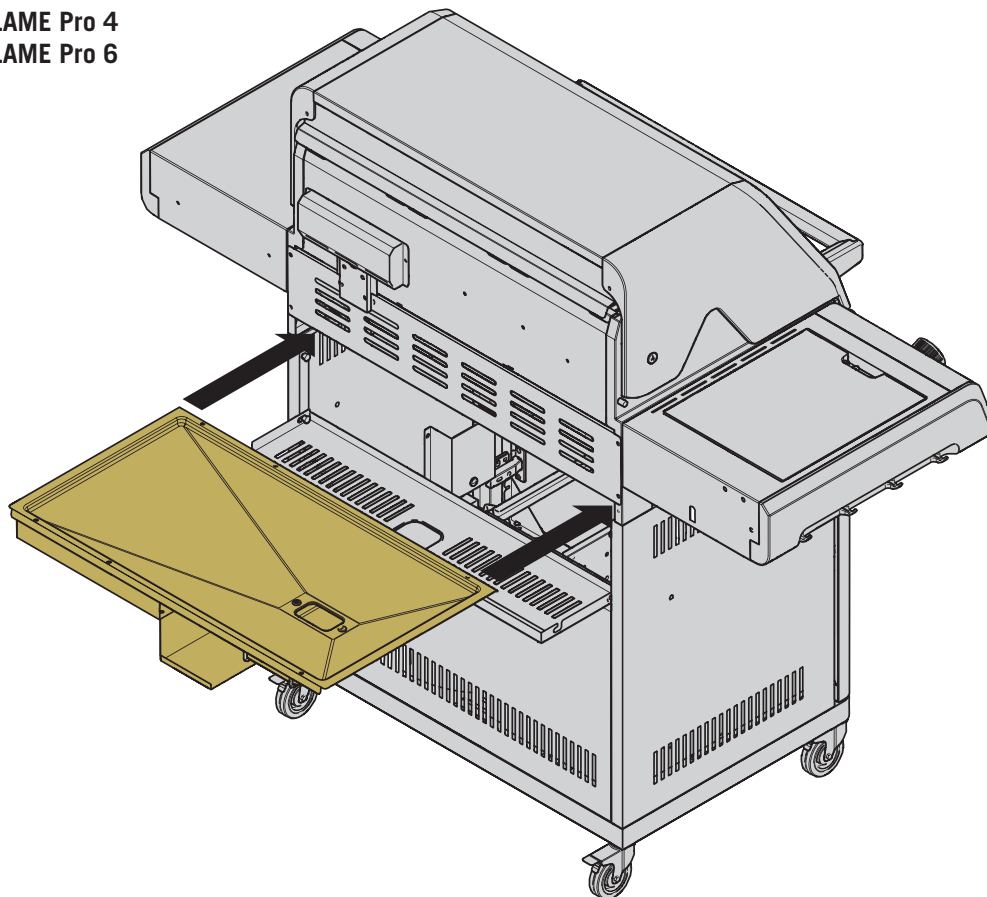




42



EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

  1 x SW 17 mm
2 x SW 19 mm

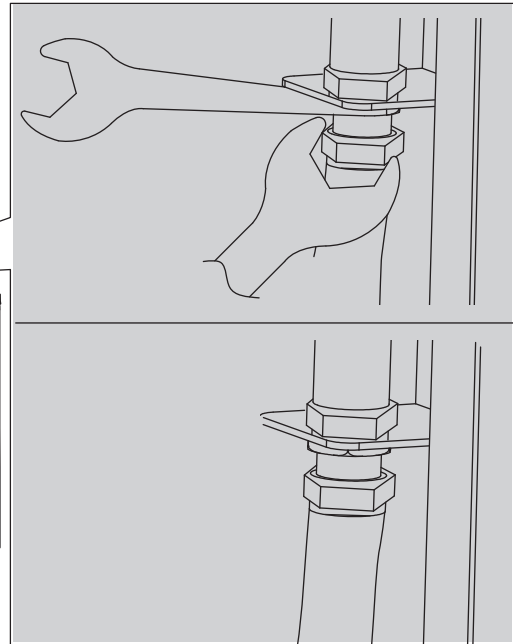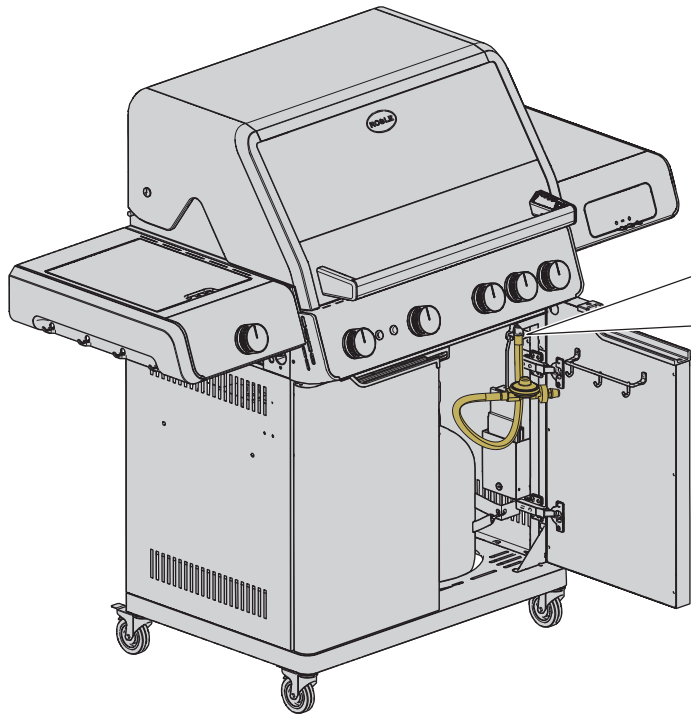

43

  EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

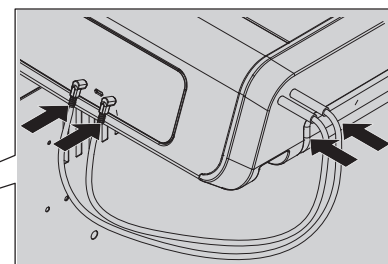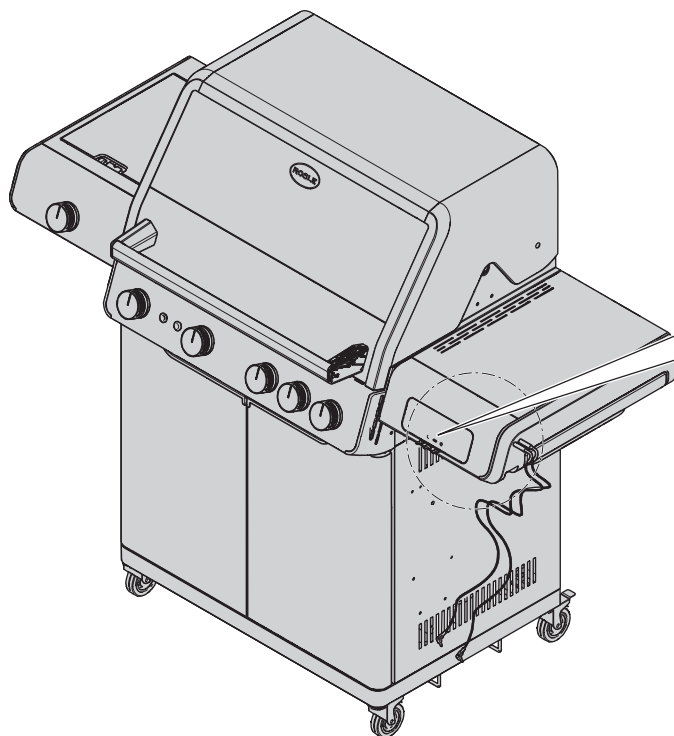


12.2025




44

 EPICFLAME Core 3

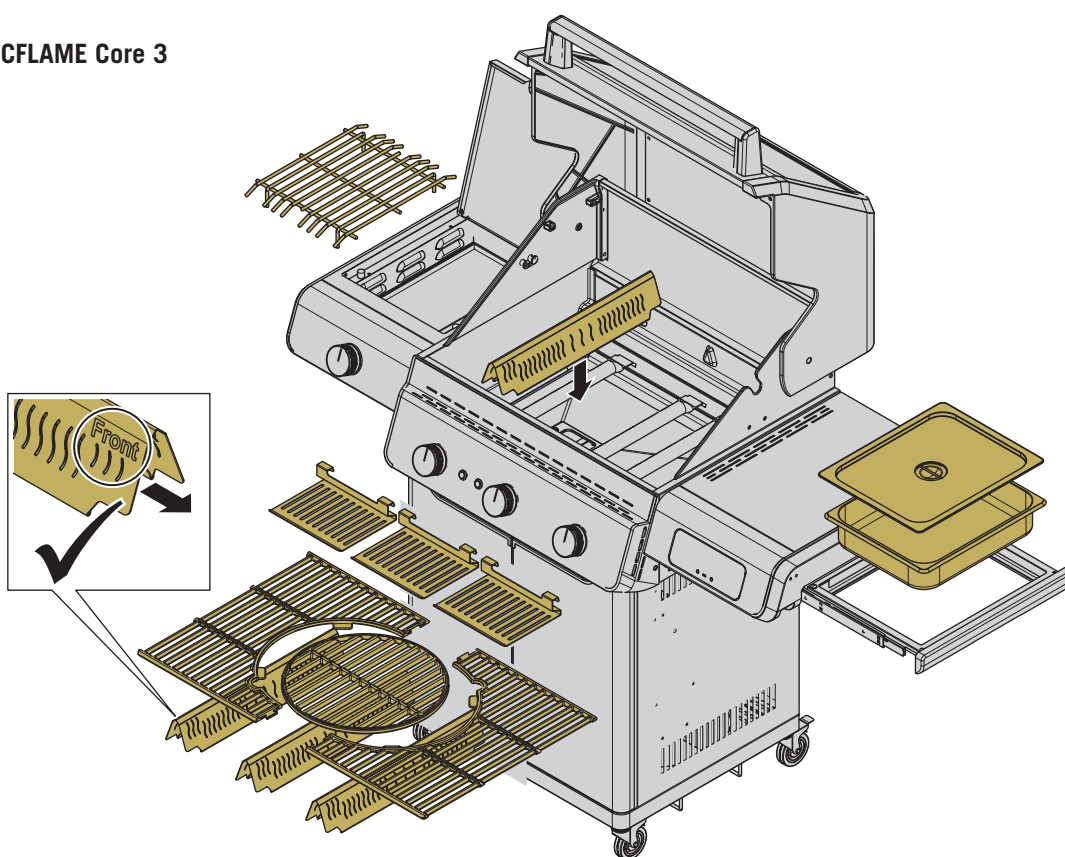

45


 
EPICFLAME Pro 4

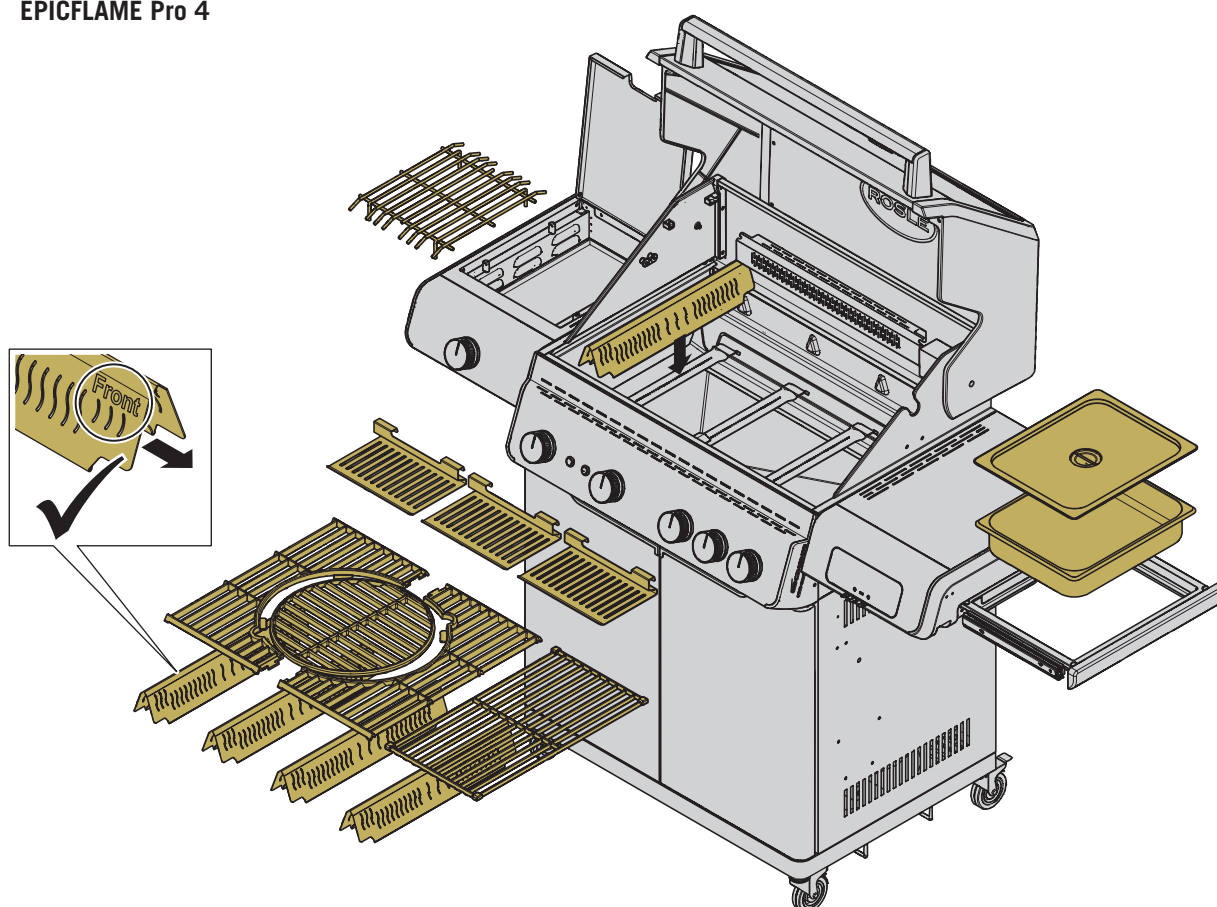



46





 
 
EPICFLAME Pro 6

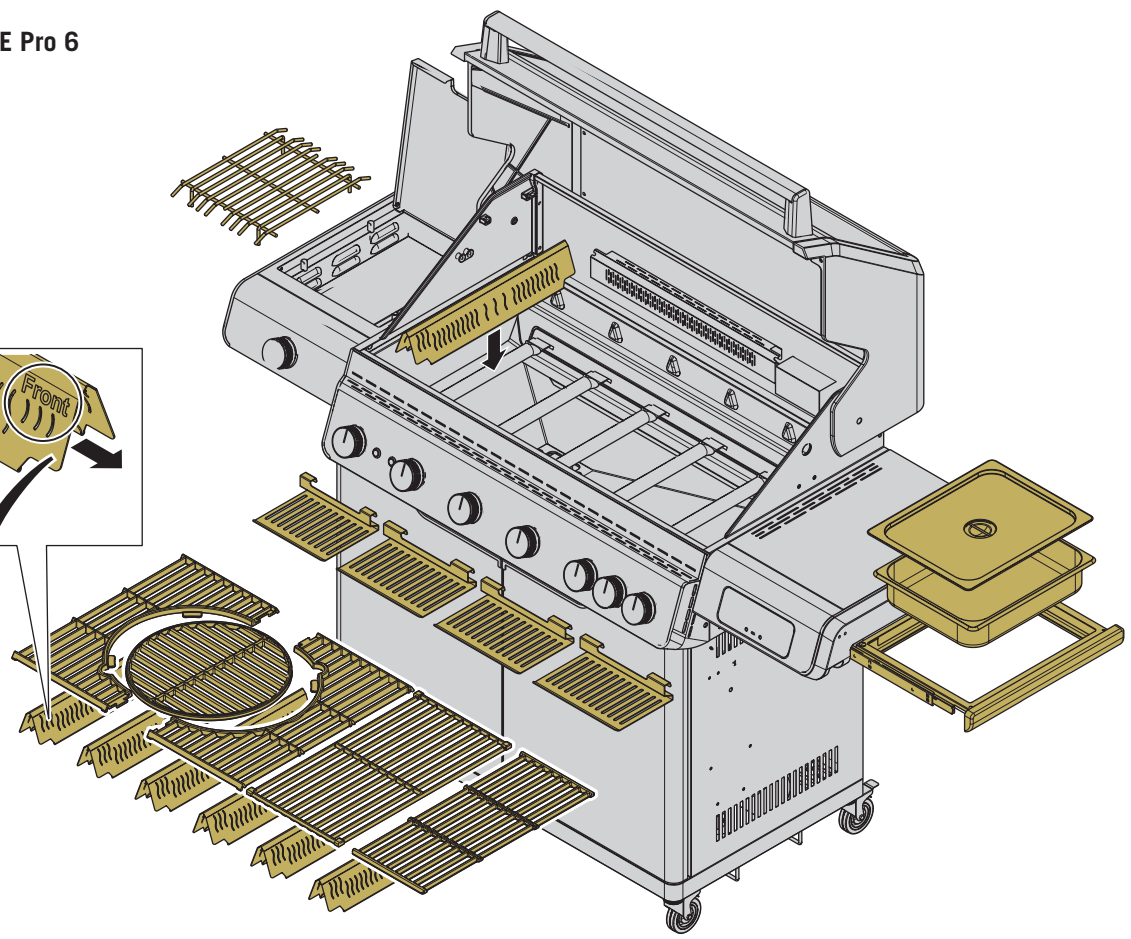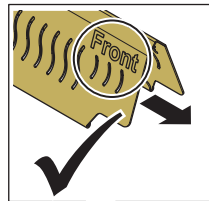



47

      EPICFLAME Core 3
EPICFLAME Pro 4
EPICFLAME Pro 6

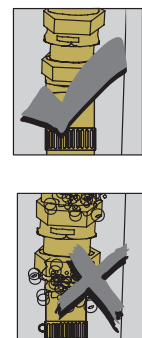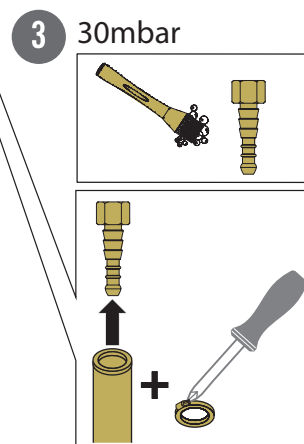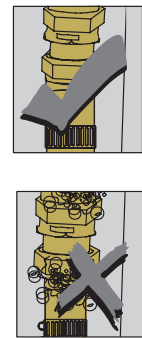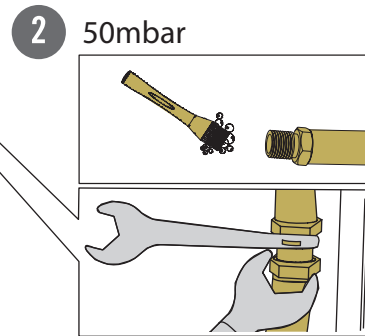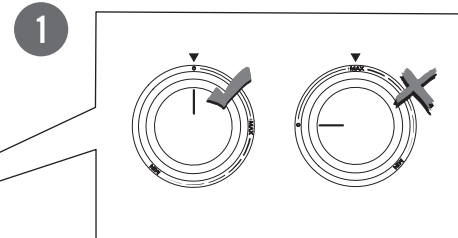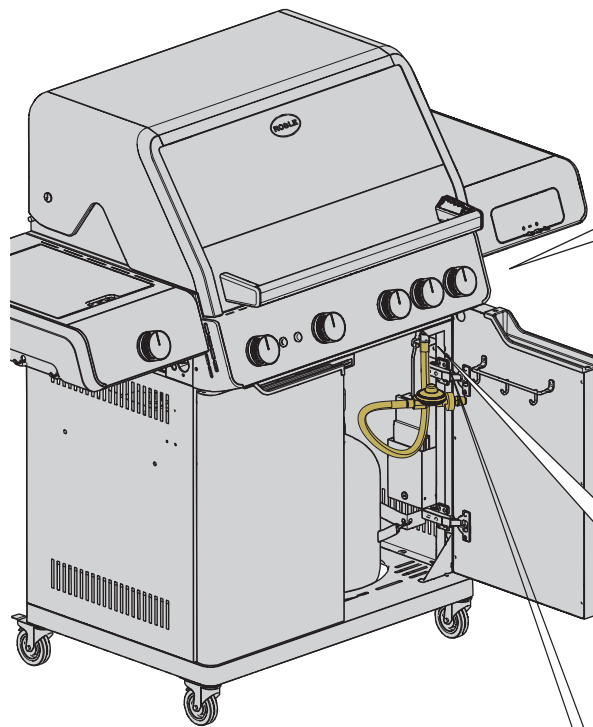



12.2025





RÖSLE GmbH & Co. KG

Johann-Georg-Fendt-Straße 38
87616 Marktoberdorf
Germany

Phone: +49 8342 912-0

Fax: +49 8342 912-190

E-Mail: support@roesle.de

Web: www.roesle.com

Version 3

12/2025

