





PHILIPS

HC5721
HC5722
HC5733
HC5734
HC5735
HC7721
HC7722
HC7733

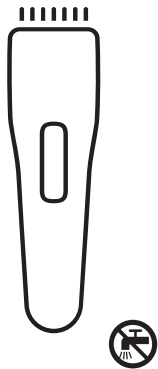

© 2026 Koninklijke Philips N.V.
All rights reserved
3000 161 6867 3 (27/04/2026)

 PHILIPS
HC5722
Alat Cukur Elektrik
5 V $\frac{1}{1}$ A
Dimpor oleh:
PT Philips Indonesia Commercial
Gedung Cibus Nine Lantai 10
Jl. TB. Simatupang No.2 RT.001 RW.005
Kel. Cilandak Timur, Kec. Pasar Minggu
Jakarta Selatan 12560 – Indonesia
Negara Pembuat: China
No. Reg.: IMKG.868.04.2026

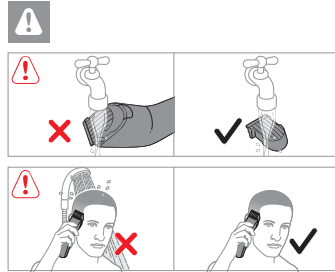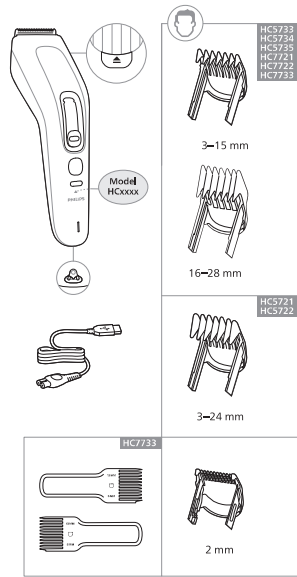

1x		
	✓	✗
	✓	✓
	✓	✓
	✓	✓



- 1 Check if there are screws in the housing of the appliance. If so, remove them.
- 2 Remove any additional screws, panels or parts of the appliance until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

