

PHILIPS


ADD6921

How to use



BG Как да използвате CZ Způsob použití DE
Gebrauchsanleitung DK Sådan bruger du FR Notice
d'utilisation GR Πώς να χρησιμοποιήσετε HU
Hogyan kell használni IL איך להשתמש PL Instrukcja
per l'uso NL Gebruiksaanwijzing PL Jak używać RO
Cum se utilizează SK Ako používať TR Nasıl kullanılır



- 1** Plug the device into a power outlet

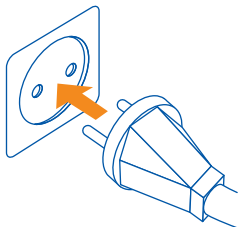


- 2** Wash the jug and water tank

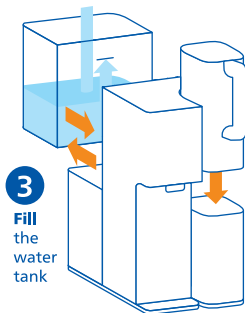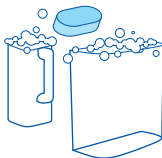

- 4** Press for 5 sec.




- 5** When the percentage flash, empty the jug

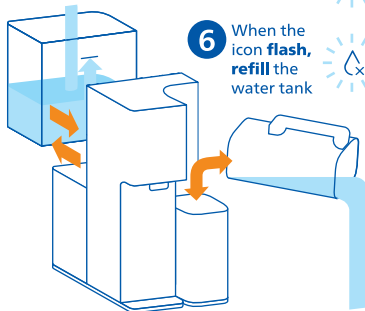

- 6** When the icon flash, refill the water tank



- 7** When the percentage flash

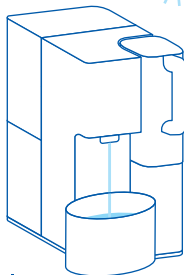

- 8** Place container (min. 2 L)

- 9** Press



support@aquashield-ips.eu

PHILIPS

ADD583

Where to buy

BG От къде да купите CZ Kde koupit DE Wo zu kaufen DK Hvor kan man købe FR Où acheter GR Πού να αγοράσετε HU Hol lehet megvásárolni IL איפה לקנות IT Dove acquistare NL Waar te koop PL Gdzie kupić RO De unde să cumpărați SK Kde kúpiť TR Nereden satın alılır



Precautions

Please note:

- Please follow the rinsing progress until it reaches "100%". During the rinsing process, in case of special circumstances, you can exit the rinsing program by long-pressing the  button for 5 seconds.
- During the first time use, please check if any water leaks from or gathers around the dispenser. If there is any strange noise, burnt smell or smoke coming out from the machine, please disconnect the power cord immediately. Contact customer services if you find any of the situations above.
- During the rinsing process, when air passes through the high-precision filter elements, micro bubbles are generated, causing the water in the filtered water jug appears white and cloudy. This is a normal phenomenon.

Daily Use

It is recommended to discard the filtered water if the machine hasn't been used for over 24 hours.

Precautions when not in use

If the product will not be used for over one week, please empty the raw water tank and the filtered water jug, then disconnect the dispenser from power supply. Seal the filter cartridge and store it in the refrigerator (2-5 °C, do not put it in the freezer). When you use it again, please follow the cleaning procedures for first time use.

Descaling every 3 months

It is recommended to descale the raw water tank every 3 months to avoid serious scaling in the raw water tank. Please refer to the user manual for the descaling procedures.

Reverse Osmosis Filter Cartridge

ADD583



www.philips.com/water